

Stoplamp Switch

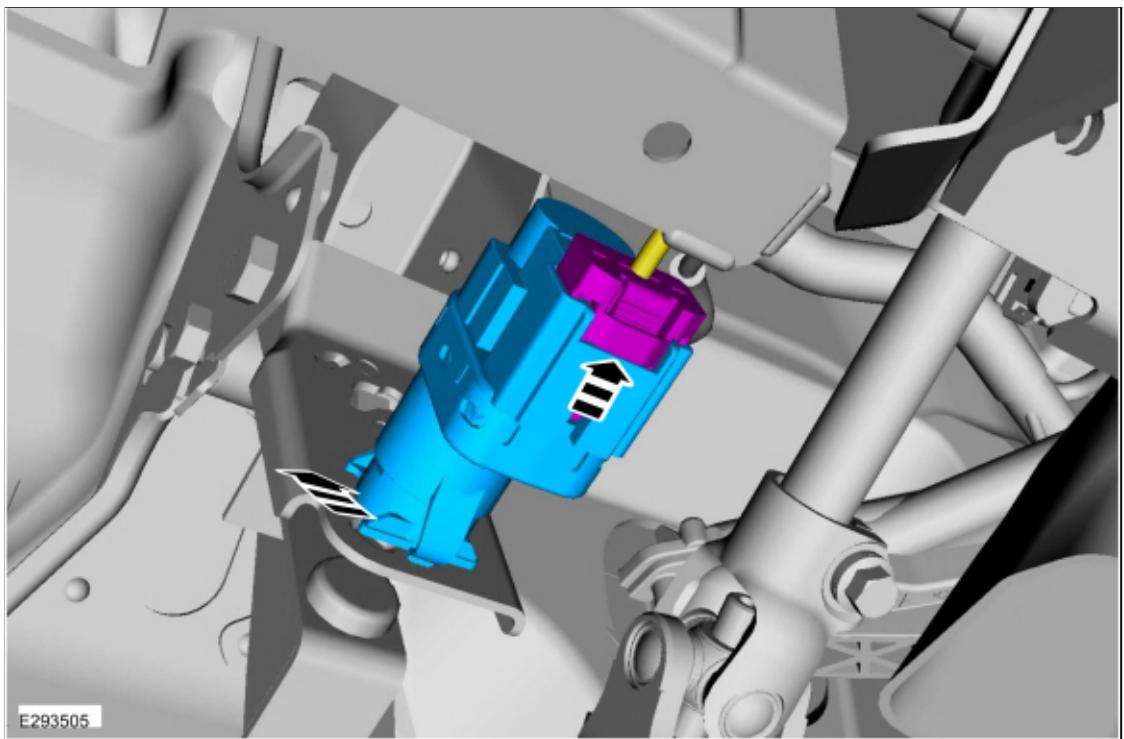
Base Part Number: 9G854

Removal

1. **NOTICE: Make sure that the brake pedal remains in the rest position.**

Rotate the stoplamp switch clockwise approximately one-eighth turn to remove the stoplamp switch.

- Disconnect the electrical connector.

**Installation**

1. **NOTICE: Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch and cruise control deactivation switch. Install these switches with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing these switches with the brake pedal in any other position results in incorrect adjustment and damages the switches.**

To install, reverse the removal procedure.

