


Special Tool(s) / General Equipment

NOTE: Removal steps in this procedure may contain installation details.

-


- | |
|--|
| |
| |
| |
| |
| |

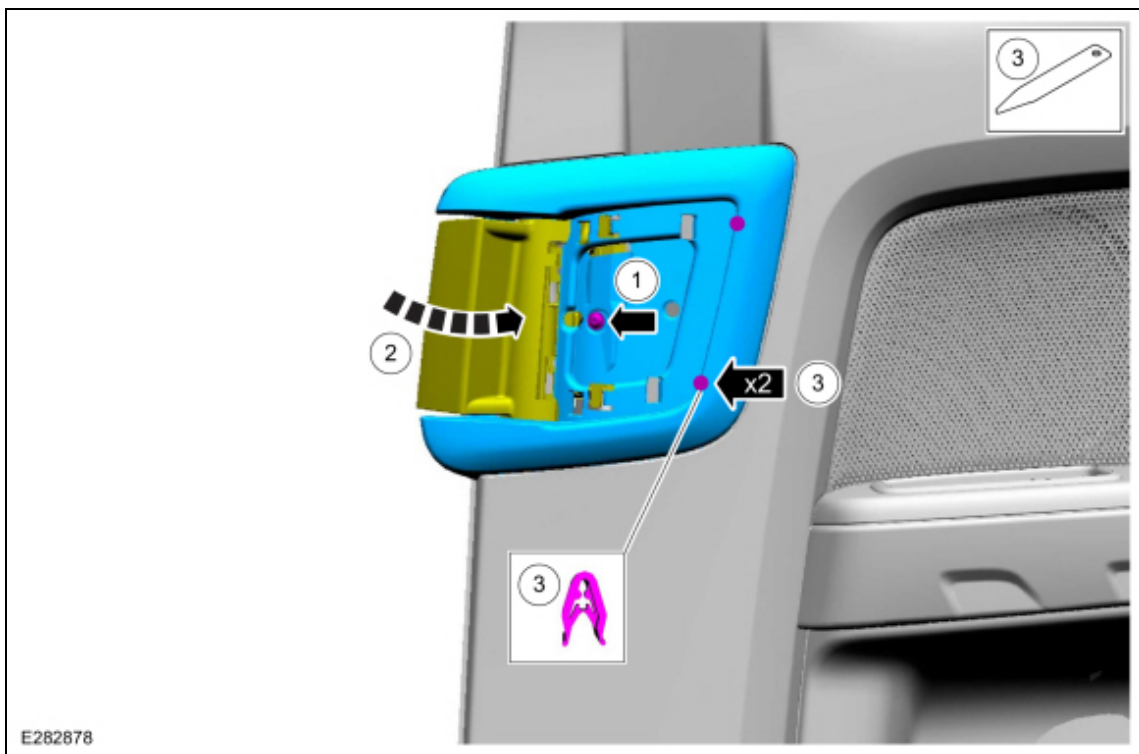

3.

Remove the interior rear door handle.

1. Remove the bolts from the interior rear door handle.
2. Remove the rear door lower latch cable from the cable mounting bracket.
3. Remove the rear door lower latch cable eyelet from the interior rear door handle.
4. Remove the rear door upper latch cable from the cable mounting bracket.
5. Remove the rear door upper latch cable eyelet from the interior rear door handle.

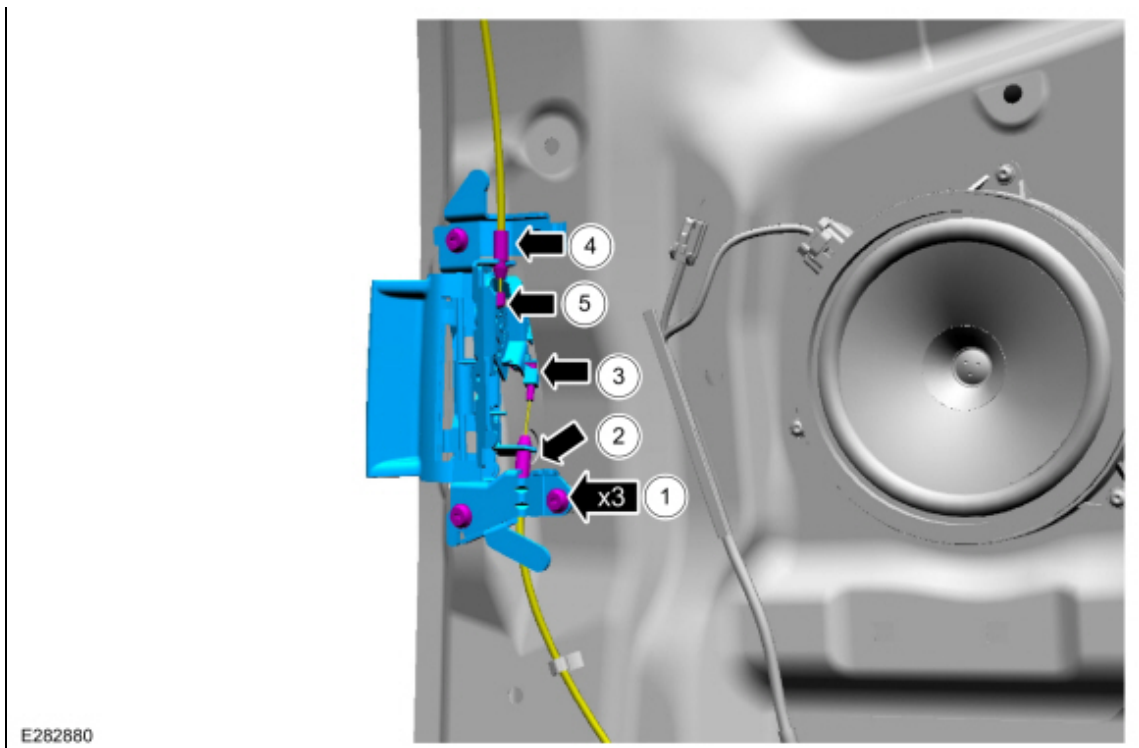

Installation

1. To install, reverse the removal procedure.