


## Anti-Lock Brake System (ABS) and Stability Control - System Operation and Component Description

### System Operation

#### System Diagram

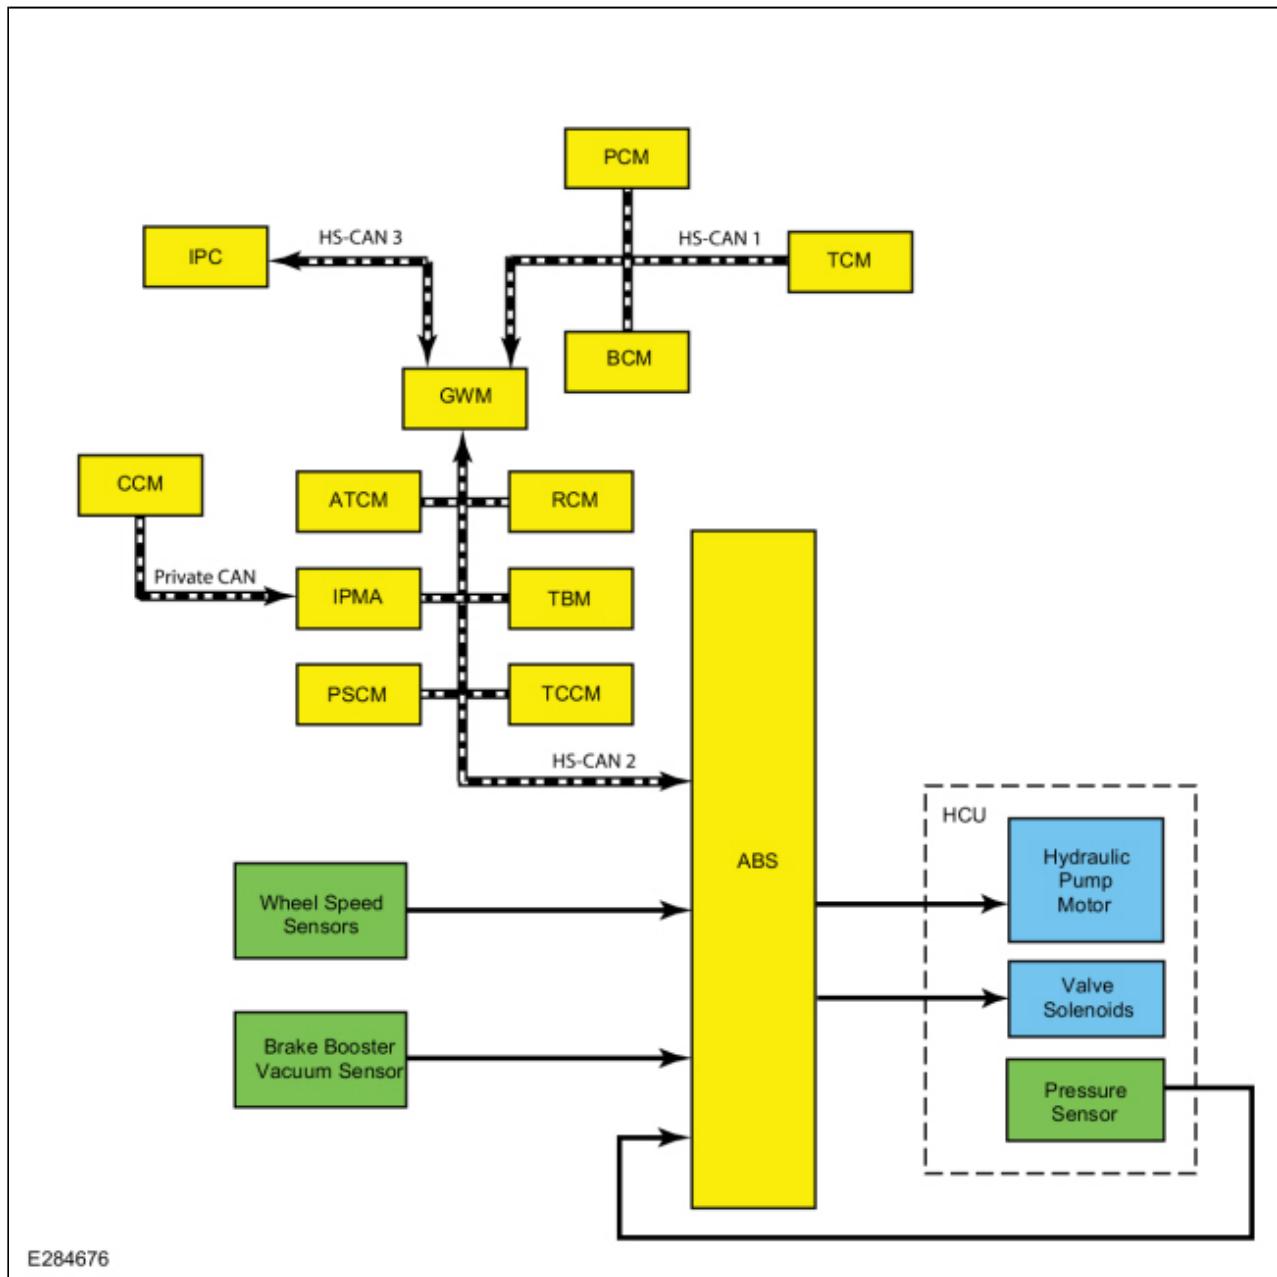

Network Message Chart

## Module Network Input Messages - ABS Module

Broadcast Message	Originating Module	Message Purpose
Accelerator pedal position	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message provides the <u>ABS</u> module with the current accelerator pedal position and notifies the <u>ABS</u> module if the data is valid or invalid. The <u>ABS</u> module uses accelerator pedal position information for correct operation of the traction control, <u>ESC</u> , <u>RSC</u> and hill start assist systems.
Adaptive cruise control deceleration	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message contains the amount of deceleration currently required by the adaptive cruise control system to maintain the distance gap set by the driver.
Adaptive cruise control braking precharge	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message is sent by the <u>CCM</u> to request precharging of the brake system in preparation for adaptive cruise control deceleration from the <u>ABS</u> module.
Adaptive cruise control braking request	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message is sent by the <u>CCM</u> to request adaptive cruise control braking from the <u>ABS</u> module.
Ambient air temperature	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. The <u>ABS</u> module uses this information for calculations in determining the operational status of the various stability control systems and features.
Brake pedal applied	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. Used to inform the <u>ABS</u> module the driver has pressed the brake pedal and notifies the <u>ABS</u> module if the data is valid or invalid. This message is used by the <u>ABS</u> module to check the brake pressure sensor located inside the <u>HCU</u> and for traction control, <u>ESC</u> , <u>RSC</u> and hill start assist operations.
Clutch pedal data	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current clutch pedal position as a percentage of total travel and if the information is within specifications, faulty or does not exist.
Collision mitigation deceleration	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message contains the amount of deceleration currently required by the <u>CCM</u> to assist in collision avoidance.
Collision mitigation braking precharge	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message is sent by the <u>CCM</u> to request precharging of the brake system in preparation for collision mitigation deceleration from the <u>ABS</u> module.
Collision mitigation braking request	<u>CCM</u>	This message is sent to the <u>IPMA</u> and then to the <u>ABS</u> module. This message is sent by the <u>CCM</u> to request collision mitigation braking from the <u>ABS</u> module.
Cruise control status	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current cruise control system status: off, denied, standby or active; and the current cruise control mode: not active, keeping speed, accelerating, decelerating, resuming high, resuming low, tap up waiting, tap down waiting.
Driven wheel torque output	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current torque output available at the driven wheels. This information is used for the traction control, hill start assist, <u>ESC</u> and <u>RSC</u> feature operation.
Door ajar status	<u>BCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This information is used by the <u>ABS</u> module for hill start assist operation.

<u>EPAS external angle request</u>	<u>PSCM</u>	This message informs the <u>ABS</u> module the <u>EPAS</u> gear is in the process of completing a park aid steering request
<u>EPAS status</u>	<u>PSCM</u>	This message informs the <u>ABS</u> module of the current <u>EPAS</u> operation status; drive state available, drive state torque available, fault, steering column torque.
Engine status	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current engine status; engine off, engine on, engine auto stopped, not used.
Engine <u>RPM</u>	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. Used to inform the <u>ABS</u> module of the current engine <u>RPM</u> . The <u>ABS</u> module uses this information for <u>EPB</u> drive away release feature, traction control, <u>ESC</u> , <u>RSC</u> and hill start assist operations.
Engine torque output	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current engine torque output. This information is used for the traction control, hill start assist, <u>ESC</u> and <u>RSC</u> feature operation.
Hill descent control request	<u>IPC</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module the driver has requested the hill descent control™ system to be activated or deactivated.
Hill start assist status	<u>IPC</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module hill start assist feature status; on, off or undefined.
Ignition key type	<u>BCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current ignition key type; standard or MyKey. The <u>ABS</u> modifies operating parameters if a restricted MyKey is used.
Ignition status	<u>BCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current ignition status; off, accessory, run, start, unknown or invalid.
Odometer master value	<u>IPC</u>	This message is first sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current odometer millage.
<u>PATS start request target command</u>	<u>PCM</u>	This message is first sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message is first sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message provides the <u>ABS</u> module with the challenge and password for anti-theft vehicle starting. During vehicle starting, the <u>PCM</u> and the <u>ABS</u> module exchange information to make sure the vehicle is being started correctly.
<u>PATS start request target status</u>	<u>PCM</u>	This message is first sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message is first sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current anti-theft start request status; disabled, enabled motive start, enabled non-motive start, disabled reset.
Rear differential lock status	<u>TCCM</u>	This message informs the <u>ABS</u> module of the current rear differential locked status; no fault, unspecified fault, differential failed open and differential failed closed. The <u>ABS</u> module requests rear differential unlocking during traction control, <u>ESC</u> and <u>RSC</u> operations.
Rear differential locking torque	<u>TCCM</u>	This message informs the <u>ABS</u> module of the current amount of torque being applied to the rear differential. The <u>ABS</u> module requests rear differential unlocking during traction control, <u>ESC</u> and <u>RSC</u> operations.
<u>RCM serial number</u>	<u>RCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. The <u>ABS</u> module stores the <u>RCM</u> serial number and verifies the serial number when

		the vehicle is started or the ignition is set to ON or ACC. Over time, the <u>ABS</u> module learns the offset of the stability sensors inside the <u>RCM</u> . When a new <u>RCM</u> serial number is found and the Interactive Vehicle Dynamics (IVD) Initialization procedure is carried out using a diagnostic scan tool, the <u>ABS</u> module resets the offset values learned for the yaw rate sensor, lateral accelerometer and roll rate sensor.
Reverse gear status	<u>TCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current reverse gear status; inactive not confirmed, inactive confirmed, active not confirmed, or active confirmed. This information is used for hill start assist, <u>ESC</u> and <u>RSC</u> operation. Hill start assist operates in forward and reverse gears. <u>ESC</u> and <u>RSC</u> do not operate when the transmission is in REVERSE.
Selectable drive mode request	<u>BCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message provides the <u>ABS</u> module with the current drive selected terrain mode; normal, sand, mud/ruts, rock, or faulty
Selectable drive mode request	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message provides the <u>ABS</u> module with the current drive selected terrain mode; normal, sand, mud/ruts, rock, or faulty
Stability-traction control mode request	<u>IPC</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module the driver has requested a change to enable or disable the traction control, <u>ESC</u> or <u>RSC</u> .
Steering wheel angle	<u>PSCM</u>	The <u>ABS</u> module uses steering angle sensor information for <u>ESC</u> and <u>RSC</u> operation. This message provides the <u>ABS</u> module with the current steering wheel angle in degrees as well as the steering wheel angle count (number or revolutions).
Terrain mode	<u>ATCM</u>	This message provides the <u>ABS</u> module with the current drive selected terrain mode; normal, sand, mud/ruts, rock, or faulty
Trailer sway control configuration	<u>IPC</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module the driver has requested the trailer sway control system to be activated or deactivated.
Trailer brake control connection	<u>TBM</u>	This message informs the <u>ABS</u> module a trailer is connected to the vehicle. The <u>ABS</u> module uses this information for trailer sway control operation.
Transfer case lock status	<u>TCCM</u>	This message informs the <u>ABS</u> module of the current transfer case locked status; OK, opened by command, inactive, fault, warning, disabled, fully locked by command, torque limited by command, under external torque control and undefined. The <u>ABS</u> module requests transfer case unlocking during traction control, <u>ESC</u> and <u>RSC</u> operations.
Transfer case locking torque	<u>TCCM</u>	This message informs the <u>ABS</u> module of the current amount of torque being applied to the transfer case. The <u>ABS</u> module requests transfer case unlocking during traction control, <u>ESC</u> and <u>RSC</u> operations.
Transfer case range	<u>TCCM</u>	This message informs the <u>ABS</u> module of the current transfer case range; low, neutral or high. The <u>ABS</u> module modifies the thresholds for traction control, <u>ESC</u> and <u>RSC</u> intervention based on the current transfer case range.
Transmission gear position	<u>TCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of which gear the transmission is currently using. This information is used for hill start assist, <u>ESC</u> and <u>RSC</u> operation. Hill start assist operates in forward and reverse gears. <u>ESC</u> and <u>RSC</u> do not operate when the transmission is in REVERSE.
Transmission gear lever	<u>TCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of which gear the driver has selected.

position		This information is used for hill start assist, <u>ESC</u> and <u>RSC</u> operation.
Transmission shift active	<u>TCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module the transmission is currently changing gears. This information is used for traction control, <u>ESC</u> and <u>RSC</u> operation.
Vehicle configuration data	<u>BCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message provides the <u>ABS</u> module with the current optional and configured items such as tire size, axle ratio, manual or automatic transaxle, keyless entry and <u>VIN</u> .
Vehicle lateral acceleration data	<u>RCM</u>	This message provides the <u>ABS</u> module with the current vehicle lateral acceleration data and notifies the <u>ABS</u> module if the data is valid or invalid. The <u>ABS</u> module uses the lateral acceleration data for traction control, <u>ESC</u> and <u>RSC</u> feature operation.
Vehicle longitudinal acceleration data	<u>RCM</u>	This message provides the <u>ABS</u> module with the current vehicle longitudinal acceleration data and notifies the <u>ABS</u> module if the data is valid or invalid. The <u>ABS</u> module uses the longitudinal acceleration data for <u>ESC</u> and <u>RSC</u> feature operation.
Vehicle roll rate data	<u>RCM</u>	This message provides the <u>ABS</u> module with the current vehicle roll rate data and notifies the <u>ABS</u> module if the data is valid or invalid. The <u>ABS</u> module uses the longitudinal acceleration data for <u>RSC</u> feature operation.
Vehicle speed	<u>PCM</u>	This message is sent to the <u>GWM</u> and then to the <u>ABS</u> module. This message informs the <u>ABS</u> module of the current vehicle speed.
Vehicle yaw rate data	<u>RCM</u>	This message provides the <u>ABS</u> module with the current vehicle yaw rate data and notifies the <u>ABS</u> module if the data is valid or invalid. The <u>ABS</u> module uses the yaw rate data for <u>ESC</u> and <u>RSC</u> feature operation.

### Anti-Lock Brake System (ABS) Function

The ABS module continuously monitors brake pedal input, lateral vehicle motion and the rotational speed of each wheel. The PCM sends the brake pedal switch information to the GWM over the HS-CAN1, the GWM sends the information to the ABS module over the HS-CAN2. The RCM sends lateral acceleration sensor information directly to the ABS module over the HS-CAN2. Wheel speed information is retrieved by the ABS module using 4 active wheel speed sensors. When the ABS module detects an impending wheel lock during a braking event, the ABS module modulates brake pressure to the appropriate brake calipers by opening and closing the appropriate solenoid valves inside the HCU while the hydraulic pump motor is activated. Once the affected wheel returns to the desired speed, the ABS module deactivates the hydraulic pump motor and returns the solenoid valves to their normal position.

The ABS module has 2 self-test options, one uses a diagnostic scan tool and the other is carried out when the ABS module is initialized (ignition ON). During either self-test the ABS module carries out a preliminary electrical check of the system sensors and activates the hydraulic pump motor for approximately one-half second. During this time, a buzzing or humming noise may be heard and a vibration may be felt in the brake pedal and is a normal condition. During the module initialized self-test, the pump motor check is carried out at approximately 10 km/h (6 mph). Any malfunction detected in the system causes the ABS module to set a DTC, disable the ABS function and send a message over the HS-CAN2 to the GWM. The GWM then sends the message to the IPC over the HS-CAN3 to illuminate the ABS warning indicator. Diagnostic Trouble Codes (DTCs) which disable the ABS do not disable the base hydraulic power-assist braking system.

### Electronic Brake Force Distribution (EBD)

On initial application of the brake pedal, full pressure is applied to the rear brakes. The ABS module uses wheel speed sensor inputs to evaluate rear wheel slip. Once the rear wheel slip exceeds a predetermined threshold, the ABS module commands the HCU to close the appropriate isolation valves to hold the rear brake pressure constant while allowing the front brake pressure to build. This creates a balanced braking condition

between the front and rear wheels. If the rear wheel slip continues and exceeds a second predetermined threshold, the ABS module commands the HCU to open the dump valves to decrease the rear brake pressure and allow the rear wheels to recover. A slight bump sensation may be felt in the brake pedal when EBD is active. If the ABS is disabled due to Diagnostic Trouble Codes (DTCs) being present in the ABS module, EBD continues to function unless the Diagnostic Trouble Codes (DTCs) are for wheel speed sensors or the HCU solenoid valves. When EBD is disabled, the ABS warning indicator, the red brake warning indicator and traction control indicator illuminate.

### **Supplemental Braking Assist**

In addition to preventing wheel lock up during braking events, the ABS module is also able to provide supplemental hydraulic brake assist through the use of the hydraulic pump motor and the HCU. This is done in the event of a severe vacuum loss at the brake booster, to maintain the distance gap set by the adaptive cruise control system or to aid in the avoidance of forward collisions.

The ABS module utilizes the HCU and hydraulic pump motor to aid in bringing the vehicle to a safe, controlled stop in the event of severe vacuum loss at the brake booster. The ABS module continually monitors the vacuum in the brake booster through the use of a vacuum sensor. When the vacuum sensor indicates vacuum is below a predetermined level, a DTC is set in the ABS module. If this occurs during a braking event or if the driver attempts to stop the vehicle with a low vacuum condition in the brake booster, the ABS module activates the hydraulic pump motor in the HCU to assist with vehicle braking.

On vehicles equipped with adaptive cruise control, the CCM monitors the area forward of the vehicle. When an object enters this area and closes the distance gap set by the driver, the CCM sends a deceleration request to the IPMA over a private CAN. The IPMA then sends the message to the ABS module over the HS-CAN2 (either an adaptive cruise control deceleration request or a collision avoidance deceleration request). When the deceleration request message is received, the ABS module activates the hydraulic pump motor and solenoid valves in the HCU to slow the vehicle down to maintain the distance gap set by the driver. Once the distance gap set by the driver is achieved, the CCM stops sending the deceleration request message and the ABS module deactivates the hydraulic pump motor and solenoid valves in the HCU. If the CCM determines the amount of braking provided by the ABS module is insufficient, the CCM sends a forward collision avoidance braking request message and warns the driver, both audibly and visually, through the use of the HUD. After receiving the braking request message, the ABS module waits for brake pedal input and, once received, applies maximum braking assist using the hydraulic pump motor and the HCU.

For additional information on the adaptive cruise control system,  
Refer to: [Cruise Control - System Operation and Component Description](#) (419-03B Cruise Control - Vehicles With: Adaptive Cruise Control, Description and Operation).

For additional information on the collision avoidance system,  
Refer to: [Collision Warning and Collision Avoidance System - System Operation and Component Description](#) (419-03C Collision Warning and Collision Avoidance System, Description and Operation).

### **AdvanceTrac**

The AdvanceTrac system is comprised of the traction control and ESC features.

### **Traction Control**

The ABS module continuously monitors and compares the rotational speed of the drive wheels in relation to the non-driven wheels. When the drive wheels begin to spin faster than the non-driven wheels, the ABS module modulates brake pressure to the appropriate brake calipers by opening and closing the appropriate solenoid valves inside the HCU while the hydraulic pump motor is activated (brake traction control). At the same time, the ABS module calculates how much engine torque reduction is required to eliminate the wheel slip and sends this torque reduction message to the GWM over the HS-CAN2 which relays the message to the PCM over the HS-CAN1. The ABS module also sends a traction event message to the GWM over the HS-CAN2 which relays this message to the IPC over the HS-CAN3. When the PCM receives the torque reduction

message, it adjusts engine timing and decreases fuel injector pulses to reduce the engine torque to the requested level (engine traction control). When the IPC receives the traction event message, it flashes the stability-traction control indicator (sliding car icon).

Once the driven wheel speed returns to the desired speed, the ABS module returns the solenoid valves in the HCU to their normal position, deactivates the hydraulic pump motor and stops sending the traction event and torque reduction messages. The PCM returns engine timing and fuel injectors to normal operation and the IPC extinguishes the stability-traction control indicator (sliding car icon). Once vehicle speed exceeds 100 km/h (62 mph), traction control is accomplished only through the PCM torque control.

The traction control system can be disabled by the driver using the stability-traction control switch. This is independent of ABS which cannot be disabled by the driver. The traction control switch is hard-wired to the IPC, when the driver presses the traction control switch, the switch sends a ground signal to the IPC. The IPC responds by illuminating the stability-traction control disabled indicator (sliding car OFF icon) and by sending a message to the GWM over the HS-CAN3. The GWM relays this message to the ABS module over the HS-CAN2. The ABS module takes no further action in regards to traction control until the driver presses the switch again in the same ignition cycle or until the ignition is cycled from OFF to ON. For additional information on disabling the traction control feature, refer to Disabling AdvanceTrac.

The ABS module disables traction control if there are any wheel speed sensor or solenoid valve Diagnostic Trouble Codes (DTCs) present in the ABS module. Traction control is also disabled if there is a communication error between the ABS module and the PCM. When traction control is disabled, the ABS module sends a message to the GWM over the HS-CAN2. The GWM relays this message to the IPC over the HS-CAN3 to illuminate the stability-traction control indicator (sliding car icon).

### **Electronic Stability Control (ESC)**

The ABS module continuously monitors the vehicle motion relative to the intended course. This is done by using sensors to compare the steering wheel input and the yaw rate sensor input with the actual vehicle motion. The PSCM sends the steering wheel angle information to the ABS module over the HS-CAN2. The RCM sends yaw rate sensor and lateral accelerometer information to the ABS module also over the HS-CAN2. If the ABS module determines from the inputs the vehicle is unable to travel in the intended direction, it modulates brake pressure to the appropriate brake calipers by opening and closing the appropriate solenoid valves inside the HCU while the hydraulic pump motor is activated. At the same time, the ABS module calculates how much engine torque reduction is required to help stabilize the vehicle and sends this torque reduction message to the GWM over the HS-CAN2 which relays the message to the PCM over the HS-CAN1. The ABS module also sends a vehicle stability event message to the GWM over the HS-CAN2 which relays this message to the IPC over the HS-CAN3. When the PCM receives the torque reduction message, it adjusts engine timing and decreases fuel injector pulses to reduce the engine torque to the requested level. When the IPC receives the vehicle stability event message, it flashes the stability-traction control indicator (sliding car icon).

Once the vehicle instability has been corrected, the ABS module returns the solenoid valves in the HCU to their normal position, deactivates the hydraulic pump motor and stops sending the traction event and torque reduction messages. The PCM returns engine timing and fuel injectors to normal operation and the IPC extinguishes the stability-traction control indicator (sliding car icon).

The ESC can be disabled by the driver using the stability-traction control switch. This is independent of ABS which cannot be disabled by the driver. The stability-traction control switch is hard-wired to the IPC, when the driver presses the stability-traction control switch, the switch sends a ground signal to the IPC. The IPC responds by illuminating the stability-traction control disabled indicator (sliding car OFF icon) and by sending a message to the GWM over the HS-CAN3. The GWM relays this message to the ABS module over the HS-CAN2. The ABS module takes no further action in regards to stability-traction until the driver presses the switch again in the same ignition cycle or the ignition is cycled from OFF to ON.

ESC does not operate with the transmission in REVERSE or with the transfer case in 4WD low. The ABS module disables ESC if there are any wheel speed sensor, stability sensor or steering angle sensor Diagnostic

Trouble Codes (DTCs) present in the ABS module. If there is a communication error between the ABS module and the PSCM or the ABS module and the RCM or PSCM, ESC also is disabled. When ESC is disabled, the ABS module sends a message to the GWM over the HS-CAN2. The GWM relays this message to the IPC over the HS-CAN3 to illuminate the stability-traction control indicator (sliding car icon).

### **Disabling AdvanceTrac**

AdvanceTrac is controlled by the stability-traction control switch in the following manner:

#### **2WD Vehicles**

- Pressing the stability control-traction switch for less than 1 second disables engine only traction control and trailer sway control.
- Pressing the stability control-traction switch for more than 5 seconds disables engine only traction control, brake traction control and trailer sway control.

#### **4WD Vehicles**

- With the transfer case in 2H, pressing the stability control-traction switch for less than 1 second disables engine only traction control, trailer sway control and ESC.
- With the transfer case in 2H, pressing the stability control-traction switch for more than 5 seconds disables engine only traction control, brake traction control and trailer sway control.
- With the transfer case in 4H, pressing the stability control-traction switch for less than 1 second disables engine only traction control, trailer sway control and ESC.
- With the transfer case in 4H, pressing the stability control-traction switch for more than 5 seconds disables engine only traction control, brake traction control and trailer sway control.
- With the transfer case in 4L, ESC is automatically disabled without pressing the stability control-traction switch.
- With the transfer case in 4L, pressing the stability control-traction switch for more than 5 seconds disables engine only traction control, brake traction control and trailer sway control.

On vehicles equipped with a locking rear differential, engine only and brake traction control are automatically disabled when the rear differential is locked.

### **Roll Stability Control (RSC)**

The ABS module continuously monitors the vehicle motion relative to the intended course. This is done by using sensors to compare the steering wheel input, yaw rate sensor input, lateral accelerometer input and roll sensor input with the actual vehicle motion. The PSCM sends the steering wheel angle information to the ABS module over the HS-CAN2. The RCM sends yaw rate sensor, lateral accelerometer and roll rate sensor information to the ABS module also over the HS-CAN2. If the ABS module determines from the inputs the vehicle is becoming unstable, the ABS module modulates brake pressure to the appropriate brake calipers by opening and closing the appropriate solenoid valves inside the HCU while the hydraulic pump motor is activated. At the same time, the ABS module calculates how much engine torque reduction is required to help stabilize the vehicle and sends this torque reduction message to the GWM over the HS-CAN2 which relays the message to the PCM over the HS-CAN1. The ABS module also sends a vehicle stability event message to the GWM over the HS-CAN2 which relays this message to the IPC over the HS-CAN3. When the PCM receives the torque reduction message, it adjusts engine timing and decreases fuel injector pulses to reduce the engine torque to the requested level. When the IPC receives the vehicle stability event message, it flashes the stability-traction control indicator (sliding car icon).

Once the vehicle instability has been corrected, the ABS module returns the solenoid valves in the HCU to their normal position, deactivates the hydraulic pump motor and stops sending the traction event and torque reduction messages. The PCM returns engine timing and fuel injectors to normal operation and the IPC extinguishes the stability-traction control indicator (sliding car icon).

RSC does not operate with the transmission in REVERSE or with the transfer case in 4WD low. The ABS

module disables RSC if there are any wheel speed sensor, stability sensor or steering angle sensor Diagnostic Trouble Codes (DTCs) present in the ABS module. If there is a communication error between the ABS module and the PSCM or the ABS module and the RCM, RSC also is disabled. When RSC is disabled, the ABS module sends a message to the GWM over the HS-CAN2. The GWM relays this message to the IPC over the HS-CAN3 to illuminate the stability-traction control indicator (sliding car icon).

### Trailer Sway Control

Trailer sway is the undesirable yaw force a trailer can apply to the towing vehicle. Trailer sway control is a unique function of the stability control system that uses steering wheel angle information and yaw rate information to determine if a trailer sway event is taking place. The PSCM sends the steering wheel angle information to the ABS module over the HS-CAN2. The RCM sends yaw rate sensor and lateral accelerometer information to the ABS module also over the HS-CAN2. If the ABS module determines from the inputs a trailer sway event is taking place, the ABS module modulates brake pressure to the appropriate brake calipers by opening and closing the appropriate solenoid valves inside the HCU while the hydraulic pump motor is activated. At the same time, the ABS module calculates how much engine torque reduction is required to eliminate the trailer sway and sends this torque reduction message to the GWM over the HS-CAN2 which relays the message to the PCM over the HS-CAN1. The ABS module also sends a trailer sway event message to the GWM over the HS-CAN2 which relays this message to the IPC over the HS-CAN3. When the PCM receives the torque reduction message, it adjusts engine timing and decreases fuel injector pulses to reduce the engine torque to the requested level. When the IPC receives the vehicle stability event message, it flashes the stability-traction control indicator (sliding car icon) and displays TRAILER SWAY REDUCE SPEED in the message center.

Once the trailer sway has been corrected, the ABS module returns the solenoid valves in the HCU to their normal position, deactivates the hydraulic pump motor and stops sending the traction event and torque reduction messages. The PCM returns engine timing and fuel injectors to normal operation and the IPC extinguishes the stability-traction control indicator (sliding car icon) and stops displaying the trailer sway message in the message center. Trailer sway control only activates when vehicle speed is greater than 65 km/h (40 mph). Any malfunction disabling RSC also disables trailer sway control.

The driver can enable and disable the trailer sway control feature using the message center and steering wheel controls. For additional information, refer to the Owner's Literature.

### Hill Start Assist

When the vehicle is stopped on an incline greater than 2.86 degrees (approximately a 5% grade), the ABS module holds the brake pressure for approximately 1.5 seconds while the driver transitions from the brake pedal to the accelerator pedal. This is accomplished by monitoring several HS-CAN messages and several sensors to determine if the vehicle is stopped and not parked, and if the vehicle is on an appropriate incline. The brake pedal message sent from the PCM through the GWM over the HS-CAN2 and the wheel speed sensor inputs allow the ABS module to determine the vehicle has come to a complete stop. The transmission selector lever message sent by the TCM through the GWM over the HS-CAN2 informs the ABS module the vehicle is not parked. The stability sensor messages sent by the RCM over the HS-CAN2 enable the ABS module to determine if the vehicle is on an incline greater than 2.86 degrees (approximately a 5% grade). Once the above conditions have been met, hill start assist automatically engages. Before the driver releases the brake pedal, the ABS module commands the HCU to close the isolation valves which maintains the current brake system pressure, preventing the vehicle from rolling down the incline. Once the driver presses the accelerator pedal and the engine RPM increases, the ABS module gradually releases the brake pressure to make sure the vehicle is neither rolling back nor driving off until there is sufficient driving torque to accelerate the vehicle forward (or backward if reversing up the incline).

### Hill Descent Control

When the hill descent control switch on the ATCM is pressed, the ATCM sends a hill descent braking assist message to the ABS module over the HS-CAN2. Once the vehicle speed is between 5 km/h (3 mph) and 32 km/h (20 mph) and the transmission is in REVERSE or any forward gear, the ABS module uses the hydraulic

pump motor and the HCU solenoid valves to maintain the vehicle speed set by the driver. If the vehicle speed is increased or decreased outside of the operational window, the system remains active but descent speed cannot be set or maintained.

The hill descent control feature requires a cool down period after sustained use. The ABS module continually monitors the descent speed, angle of descent, pump motor run time and solenoid valve use. Once the ABS module determines a cool down period is needed, the module sends a message to the GWM over the HS-CAN2. The GWM relays the message to the IPC over the HS-CAN3 to display HILL DESCENT CONTROL OFF SYSTEM COOLING in the message center.

Hill descent control has 3 modes of operation:

- At speeds below 32 km/h (20 mph): when the hill descent control switch is pressed and conditions are correct for hill descent activation, the hill descent control system is enabled. The hill descent indicator illuminates solidly and the message center indicates hill descent control is active.
- At speeds below 32 km/h (20 mph): when the hill descent control switch is pressed and conditions are **not** correct for hill descent activation; the hill descent control system is enabled, the hill descent control indicator illuminates solidly and a message is displayed in the message center indicating the reason hill descent is not active.
- At speeds **above** 32 km/h (20 mph): when the hill descent control switch is pressed, the Hill Descent Control system is not enabled and the hill descent control indicator does not illuminate. Once the vehicle slows to below 32 km/h (20 mph), the hill descent control switch must be pressed again to enable the Hill Descent Control system.

## **Terrain Management System**

The rotary switch on the ATCM allows the driver to select between 4 modes; normal, snow / mud / grass, sand or rock. These driving modes alter throttle response, transmission shift patterns, EPAS feel and stability control intervention thresholds. Rotating the switch to a specific mode sends a signal to the BCM, the module then sends a message to the GWM over the HS-CAN1, and the GWM relays this message to the ABS module over the HS-CAN2. The BCM also sends a message to the PCM, PSCM, and TCM.

Some drive modes reduce traction and stability control performance and the stability-traction control warning indicator illuminates in the instrument cluster.

- **Normal:** This mode is for on-road conditions and should be used on surfaces which are similar to hard road surfaces, or once the need for any of the off-road modes has passed.
- **Snow / Mud / Grass:** This mode should be used where a firm surface is covered with loose or slippery material. This includes gravel, shallow mud, wet grass or snow covered road. This mode is not available when the transfer case is in 4L.
- **Sand:** This mode should be used for crossing deep sand or deep sticky mud. This mode is not available when the transfer case is in 4L.
- **Rock:** This mode gives low speed controllability for crawling over rocks. This mode is **only** available when the transfer case is in 4L.

## **MyKey® Interaction**

Through the MyKey® feature, traction control can be configured to be always on or to allow the driver to select the traction control function on or off. When the traction control function is configured to be always on and a MyKey® restricted key is in use, the IPC ignores any requests made by the driver to disable the traction control function and does not send any traction control disable messages to the GWM. Refer to the Owner's Literature for additional information on the various MyKey® settings.

## **Stability-Traction Control Indicator (Sliding Car Icon)**

One or both of the stability-traction control indicators may illuminate as a result of momentary sensor disturbances due to environmental or driving conditions (including severe vehicle maneuvers or extreme off

road usage). Once illuminated, the indicator remains illuminated until the environmental or driving condition is no longer present and the ignition is cycled from ON to OFF and then back to ON again. If there are no other customer concerns, symptoms, indicators or Diagnostic Trouble Codes (DTCs), the stability-traction control indicator may have been illuminated due to these environmental or driving conditions.

Refer to: [Instrument Panel Cluster \(IPC\) - System Operation and Component Description](#) (413-01 Instrumentation, Message Center and Warning Chimes, Description and Operation).

### **Stability-Traction Control Disabled Indicator (Sliding Car OFF Icon)**

Refer to: [Instrument Panel Cluster \(IPC\) - System Operation and Component Description](#) (413-01 Instrumentation, Message Center and Warning Chimes, Description and Operation).

## **Component Description**

### **Anti-Lock Brake System (ABS) Module**

The ABS module is attached directly to the HCU and is the ECU for the ABS and stability control systems. The module monitors all sensor inputs and all HS-CAN messages relating to ABS and stability control, then directly controls the solenoid valves and the hydraulic pump motor in the HCU. The ABS module can be serviced separately from the HCU. When a new ABS is installed, the module must be programmed with the current vehicle configuration information. For additional information on module programming, Refer to: [Module Configuration - System Operation and Component Description](#) (418-01 Module Configuration, Description and Operation).

### **Brake Booster Vacuum Sensor**

The brake booster vacuum sensor is a piezoelectric device used by the ABS module to monitor the vacuum in the brake booster. The sensor is hardwired to the ABS module by 3 circuits. One circuit is for the 5 volt sensor supply, one circuit is for sensor ground and one circuit is for sensor output. The sensor output ranges from 0.3 volt to 4.7 volts, depending on the amount of vacuum in the booster.

### **Hill Descent Control Switch**

The hill descent control switch is a single-pole, momentary-contact switch and is part of a switch pack containing the hill descent control switch, the stability-traction control switch, and the electronic locking differential switch. The switch is wired directly to the IPC.

### **Hydraulic Control Unit (HCU)**

The HCU contains the solenoid valves, the hydraulic pump motor and the pressure sensor used by the ABS for the ABS and stability control systems. While the ABS module can be serviced separately from the HCU, a new HCU comes with a new ABS module.

### **Stability Control Sensors**

The stability control sensors for the traction control and ESC functions consist of the yaw rate sensor, lateral accelerometer, longitudinal accelerometer and roll rate sensor. The sensors are housed in the RCM which sends sensor information to the ABS module over the HS-CAN2. If any of the sensors are defective, a new RCM must be installed.

- The yaw rate sensor measures the yaw angle which is the difference between the direction the vehicle is pointing when cornering and the direction the vehicle is actually moving.

- The longitudinal accelerometer measures the acceleration and deceleration of the vehicle as it moves forward and backward.
- The lateral accelerometer measures the force created when a vehicle corners that tends to push a vehicle sideways.
- The roll rate sensor measures the rate of rotation of the vehicle along the centerline of the vehicle from front to back.

Lateral acceleration has 2 forms. The first is the centrifugal acceleration that is generated when the vehicle travels around in a circle. The second is the acceleration due to gravity. On level ground there is no lateral acceleration due to gravity. However, if the vehicle is parked sideways on a bank or incline, the sensor measures some lateral acceleration due to gravity, even though the vehicle is not moving.

### **Stability-Traction Control Switch**

The stability-traction control switch is a single-pole, momentary-contact switch and is part of a switch pack containing the hill descent control switch, the stability-traction control switch, and the electronic locking differential switch. The switch is wired directly to the IPC.

### **Wheel Speed Sensor**

On vehicles not equipped with active park assist, all 4 wheel speed sensors are active (magneto resistive) sensors operating on the Hall-effect principle to generate a square wave signal proportional to the rotational speed of the wheel. Because these are active sensors, receiving voltage from the ABS module and then sending a varying voltage back to the ABS module, they are able to detect much lower rotational speeds than passive (magnetic inductive) sensors. Each wheel speed sensor is connected to the ABS module by 2 circuits which are used for both sensor power and sensor signal return.

On vehicles equipped with active park assist, both rear wheel speed sensors are active, bi-directional sensors. Each of the 2 sensors contain 2 sensing elements mounted side-by-side. Because the 2 sensing elements are mounted next to each other the 2 voltage signals are slightly out of phase, which causes one element to generate a voltage signal before the other element. This allows the ABS module to not only determine wheel speed, but also wheel direction for active park assist.

### **Wheel Speed Sensor Encoders**

The wheel speed sensor encoders are magnetized, toothed rings used to create a Hall-effect switch when combined with the wheel speed sensor. The front wheel speed sensor encoders are integrated into the front wheel bearing and are serviced with the front wheel bearing. The rear wheel speed sensor encoders are pressed onto the rear wheel axle shaft and are serviced separately from the axle shaft.

