


# COOLING SYSTEM

## DESCRIPTION


This engine utilizes a pressurized water forced circulation cooling system which includes a thermostat equipped with a by-pass valve mounted on the inlet side.

3S-FE

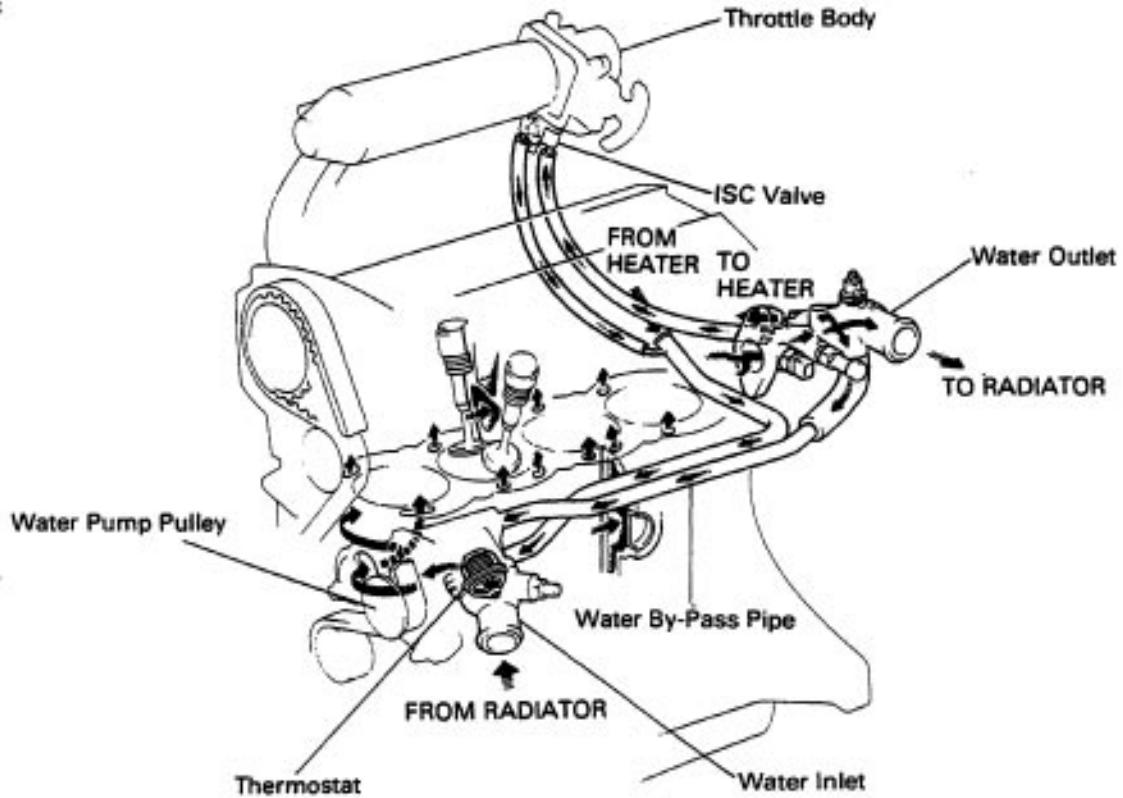

CO0581

2VZ-FE

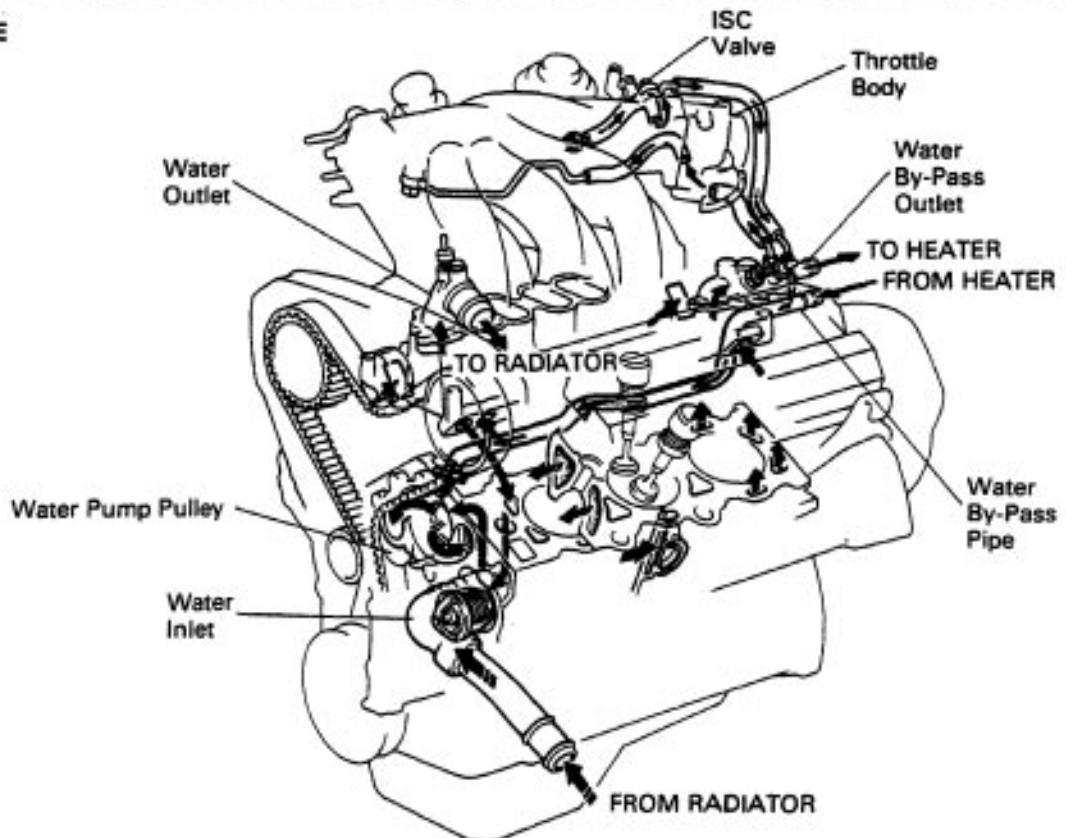

CO0602

The cooling system is composed of the water jacket (inside the cylinder block and cylinder head), radiator, water pump, thermostat, electric fan, hoses and other components.

Coolant which is heated in the water jacket is pumped to the radiator, through which an electric fan blows air to cool the coolant as it passes through. Coolant which has been cooled is then sent back to the engine by the water pump, where it cools the engine.

The water jacket is a network of channels in the shell of the cylinder block and cylinder head through which coolant passes. It is designed to provide adequate cooling of the cylinders and combustion chambers which become heated during engine operation.

## RADIATOR

The radiator performs the function of cooling the coolant which has passed through the water jacket and become hot, and it is mounted in the front of the vehicle. The radiator consists of an upper tank and lower tank, and a core which connects the two tanks. The upper tank contains the inlet for coolant from the water jacket and the filler inlet. It also has a hose attached through which excess coolant or steam can flow. The lower tank has an outlet and drain cock for the coolant. The core contains many tubes through which coolant flows from the upper tank to the lower tank as well as cooling fins which radiate heat away from the coolant in the tubes.

The air sucked through the radiator by the electric fan, as well as the wind generated by the vehicle's travel, passes through the radiator, cooling the coolant. Models with automatic transmission include an automatic transmission fluid cooler built into the lower tank of the radiator. A fan with an electric motor is mounted behind the radiator to assist the flow of air through the radiator. The fan operates when the coolant temperature becomes high in order to prevent it from becoming too high.

## RADIATOR CAP

The radiator cap is a pressure type cap which seals the radiator, resulting in pressurization of the radiator as the coolant expands. The pressurization prevents the coolant from boiling even when the coolant temperature exceeds 100°C (212°F). A relief valve (pressurization valve) and a vacuum valve (negative pressure valve) are built into the radiator cap. The relief valve opens and lets steam escape through the overflow pipe when the pressure generated inside the cooling system exceeds the limit (coolant temperature: 110 – 120°C, 230 – 248°F, pressure: 0.3 – 1.0 kg/cm<sup>2</sup>, 4.3 – 14.2 psi, 29.4 – 98.1 kPa). The vacuum valve opens to alleviate the vacuum which develops in the coolant system after the engine is stopped and the coolant temperature drops.

The valves's opening allows the coolant in the reservoir tank to return to the cooling system.

## RESERVOIR TANK

The reservoir tank is used to catch coolant which overflows the cooling system as a result of volumetric expansion when the coolant is heated. The coolant in the reservoir rank returns to the radiator when the coolant temperature drops, thus keeping the radiator full at all times and avoiding needless coolant loss. Check the reservoir tank level to find out if the coolant needs to be replenished.

## WATER PUMP

The water pump is used for forced circulation of coolant through the cooling system. It is mounted on the front of the cylinder block and driven by a timing belt.

## THERMOSTAT

The thermostat has a wax type by-pass valve and is mounted in the water inlet housing. The thermostat includes a type of automatic valve operated by fluctuations in the coolant temperature. This valve closes when the coolant temperature drops, preventing the circulation of coolant through the engine and thus permitting the engine to warm up rapidly. The valve opens when the coolant temperature has risen, allowing the circulation of coolant. Wax inside the thermostat expands when heated and contracts when cooled. Heating the wax thus generates pressure which overpowers the force of the spring which keeps—the valve closed, thus opening the valve. When the wax cools, its contraction causes the force of the spring to take effect once more, closing the valve. The thermostat in this engine operates at a temperature of 82°C (180°F).

# TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Engine overheats	Dirt, leaves or insects on radiator or condenser Hoses, Water pump, thermostat housing, radiator, heater, core, plugs or head gasket leakage Thermostat faulty Incorrect ignition timing Electric cooling system faulty Radiator hose plugged or rotted Water pump faulty Radiator plugged or cap faulty Cylinder head or block cracked or water passage clogged	Clean radiator or condenser Repair as necessary  Check thermostat Reset tinning Inspect electric cooling system Replace hose Replace water pump Check radiator and cap Repair as necessary	CO-12, 13 IG-17, 20 CO-20, 22  CO-6, 9




HINT: If the engine tends to overheat, removal of the thermostat will adversely effect cooling efficiency.

## CHECK AND REPLACEMENT OF ENGINE COOLANT

### 1. CHECK ENGINE COOLANT LEVEL AT RESERVE TANK

The coolant level should be between the "LOW" and "FULL" lines.

If low, check for leaks and add coolant up to the "FULL" line.

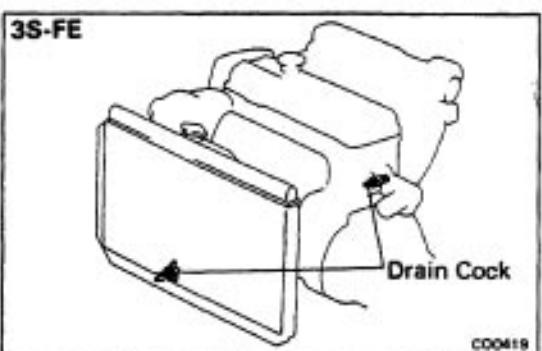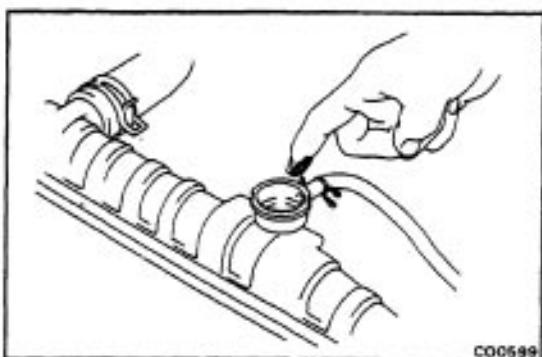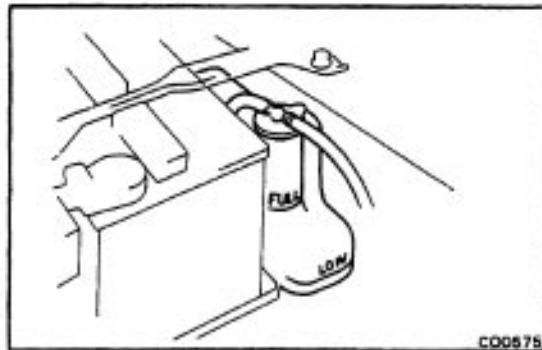

### 2. CHECK ENGINE COOLANT QUALITY

There should not be any excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

### 3. (3S-FE)

#### REPLACE ENGINE COOLANT

(a) Remove the radiator cap.

**CAUTION: To avoid the danger of being burned, do not remove it while the engine and radiator are still hot as fluid and steam can be blown out under pressure.**

(b) Drain the coolant from the .radiator and engine drain cocks. (Engine drain cock at the right rear of engine block.)

(c) Close the drain cocks.

**Torque (Engine drain cock):**

**130 kg-cm (9 ft-lb, 13 N-m)**

## TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Engine overheats	Dirt, leaves or insects on radiator or condenser Hoses, Water pump, thermostat housing, radiator, heater, core, plugs or head gasket leakage Thermostat faulty Incorrect ignition timing Electric cooling system faulty Radiator hose plugged or rotted Water pump faulty Radiator plugged or cap faulty Cylinder head or block cracked or water passage clogged	Clean radiator or condenser Repair as necessary  Check thermostat Reset tinning Inspect electric cooling system Replace hose Replace water pump Check radiator and cap Repair as necessary	<a href="#">CO-12, 13</a> <a href="#">IG-17, 20</a> <a href="#">CO-20, 22</a>  <a href="#">CO-6, 9</a>




HINT: If the engine tends to overheat, removal of the thermostat will adversely effect cooling efficiency.

## CHECK AND REPLACEMENT OF ENGINE COOLANT

### 1. CHECK ENGINE COOLANT LEVEL AT RESERVE TANK

The coolant level should be between the "LOW" and "FULL" lines.

If low, check for leaks and add coolant up to the "FULL" line.

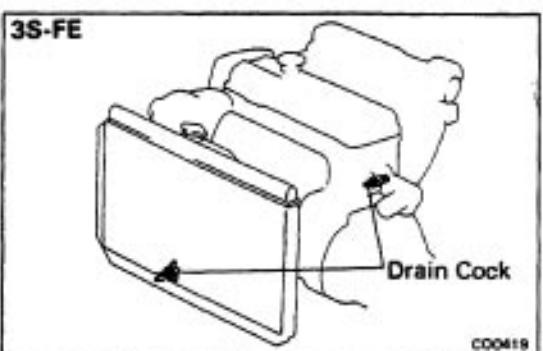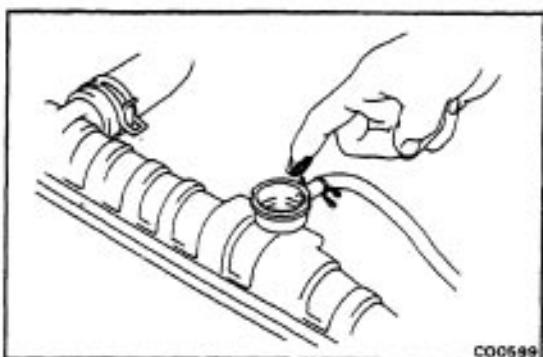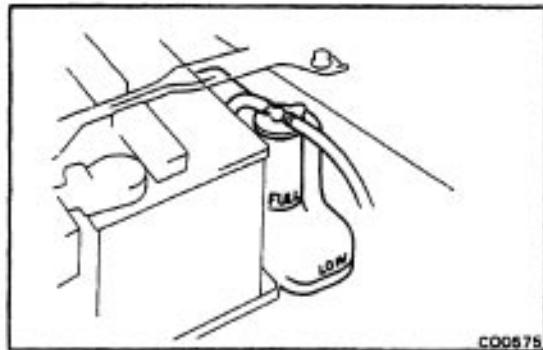

### 2. CHECK ENGINE COOLANT QUALITY

There should not be any excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

### 3. (3S-FE)

#### REPLACE ENGINE COOLANT

(a) Remove the radiator cap.

**CAUTION: To avoid the danger of being burned, do not remove it while the engine and radiator are still hot as fluid and steam can be blown out under pressure.**

(b) Drain the coolant from the .radiator and engine drain cocks.  
(Engine drain cock at the right rear of engine block.)

(c) Close the drain cocks.

**Torque (Engine drain cock):**

**130 kg-cm (9 ft-lb, 13 N-m)**

## (d) Fill the system with coolant.

Use a good brand of ethylene-glycol base coolant, mixed according to the manufacturer's directions.

Using coolant which includes more than 50% ethylene-glycol (but less than 70%) is recommended.

**NOTICE:**

- **Do not use alcohol type coolant.**
- **The coolant should be mixed with demineralized water or distilled water.**

**Capacity (w/ Heater).**

**M/T 6.4 liters (6.8 US qts, 5.6 Imp. qts)**


**A/T (2WD) 6.3 liters (6.7 US qts, 5.5 Imp. qts)**

**A/T (4WD) 6.8 liters (7.2 US qts, 6.0 Imp. qts)**

## (e) Install the radiator cap.

## (f) Start the engine and check for leaks.

## (g) Recheck the coolant level and refill as necessary.

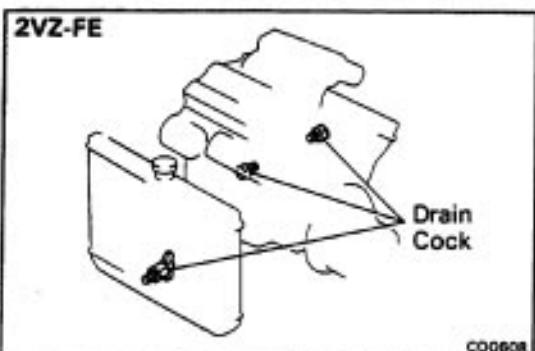**4. (2VZ-FE)****REPLACE ENGINE COOLANT**

## (a) Remove the radiator cap.

**CAUTION: To avoid the danger of being burned, do not remove it while the engine and radiator are still hot as fluid and steam can be blown out under pressure.**

## (b) Drain the coolant from the radiator and engine drain cocks.

(Engine drain cocks are at the front center and rear right of the cylinder block.)

## (c) Close the drain cocks.

**Torque (Engine drain cock):**

**300 kg-cm (22 ft-lb, 29 N·m)**

## (d) To release the air, loosen the union bolt of the water outlet five revolutions.

## (e) Slowly fill the system with coolant.

Use a good brand of ethylene-glycol base coolant, mixed according to the manufacturer's directions.

**Capacity (w/ Heater):**

**M/T 9.5 liters (10.0 US qts, 8.4 Imp. qts)**

**A/T 9.4 liters (9.9 US qts, 8.3 Imp. qts)**

## (f) Tighten the union bolt of the water outlet.


**Torque: 180 kg-cm (13 ft-lb, 18 N·m)**

## (g) Install the radiator cap.


## (h) Start the engine and check for leaks.

## (i) Recheck the coolant level and refill as necessary.

**HINT: When the coolant has been depleted, refill with coolant and repeat steps (d) to (i).**

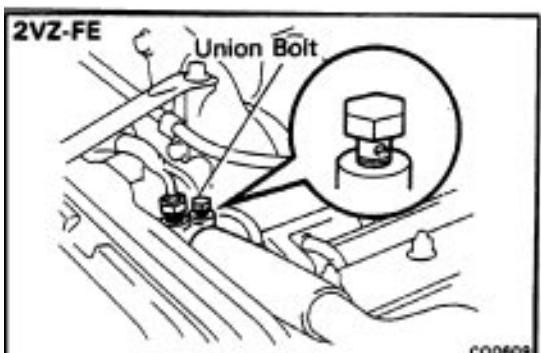


## WATER PUMP (3S-FE) COMPONENTS

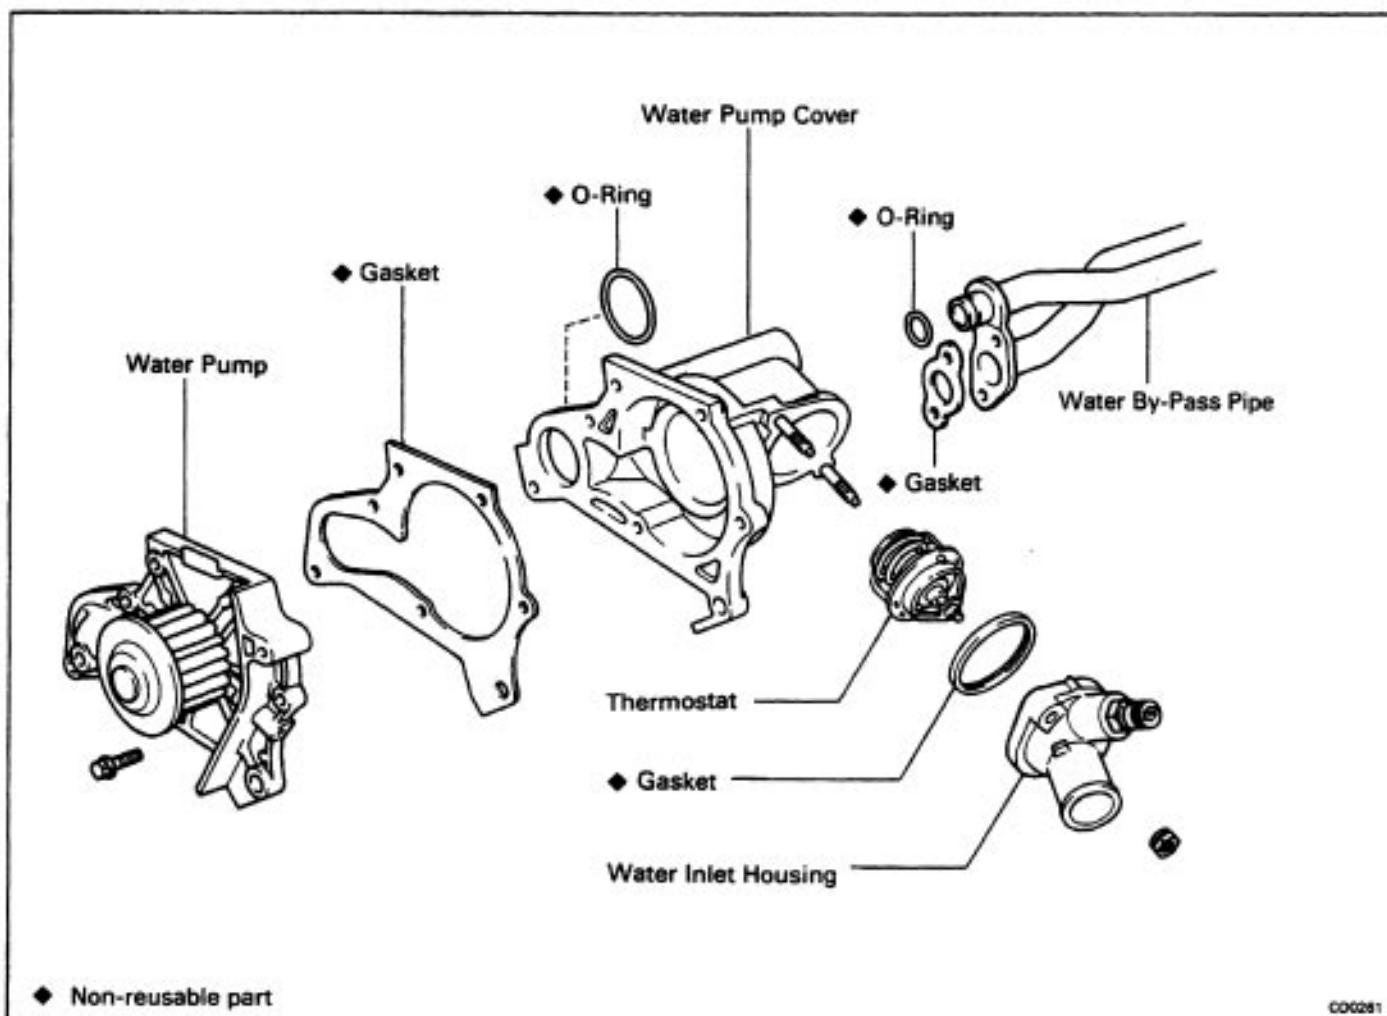


### REMOVAL OF WATER PUMP


1. DRAIN ENGINE COOLANT (See page CO-4)
2. DISCONNECT WATER TEMPERATURE SWITCH CONNECTOR
3. DISCONNECT RADIATOR LOWER HOSE FROM WATER INLET HOUSING
4. REMOVE TIMING BELT, PULLEYS  
(See pages EM-23 to 26)
5. REMOVE WATER PUMP AND WATER PUMP COVER ASSEMBLY .

- (a) Remove the two nuts holding the pump to the water–pass pipe.

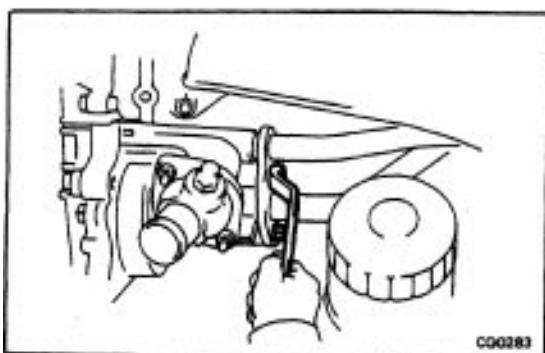

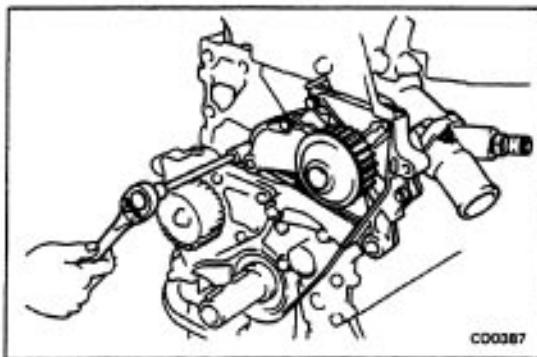


- (b) Remove the three bolts in the sequence shown.
- (c) Pull out the water pump together with pump cover.
- (d) Remove the two O-rings and gasket.

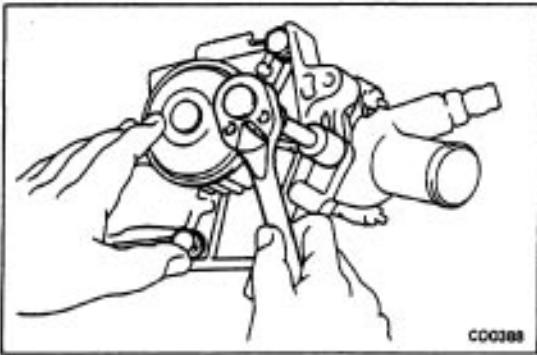

## 6. DISASSEMBLE WATER PUMP AND WATER PUMP COVER


Remove the three bolts, water pump and gasket from the pump cover.

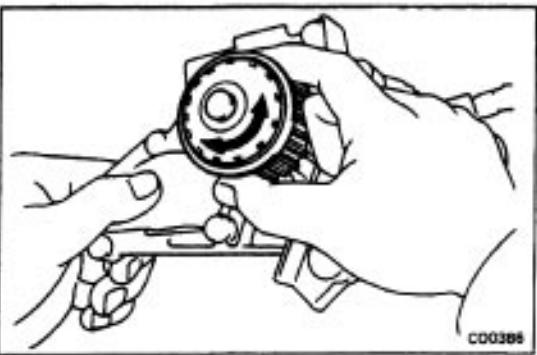

## INSPECTION OF WATER PUMP

### INSPECT WATER PUMP

Turn the pulley and check that the water pump bearing moves smoothly and quietly.

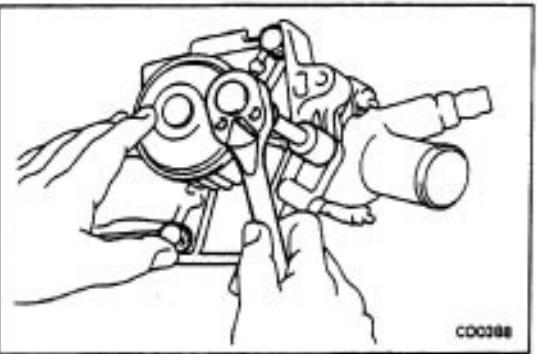


## INSTALLATION OF WATER PUMP

(See page CO-6)

### 1. ASSEMBLE WATER PUMP AND WATER PUMP COVER


Install a new gasket and the pump to the pump cover with the three bolts.

**Torque: 90 kg-cm (78 in.-lb, 8.8 N·m)**

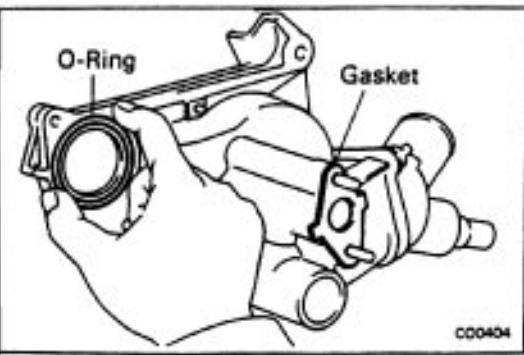


### 2. INSTALL WATER PUMP AND WATER PUMP COVER ASSEMBLY

- (a) Install two new O-rings and gasket to the pump cover and water by-pass pipe.

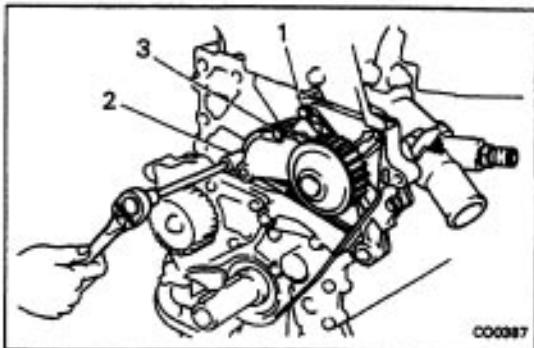

- (b) Apply a light coat of engine oil on the 4-ring of the water by-pass pipe.
- (c) Connect the pump cover to the water by-pass pipe. Do not install the nuts yet.
- (d) Install the water pump with the three bolts. Torque the bolts in the sequence shown.  
**Torque: 95 kg-cm (82 in.-lb, 9.3 N-m)**

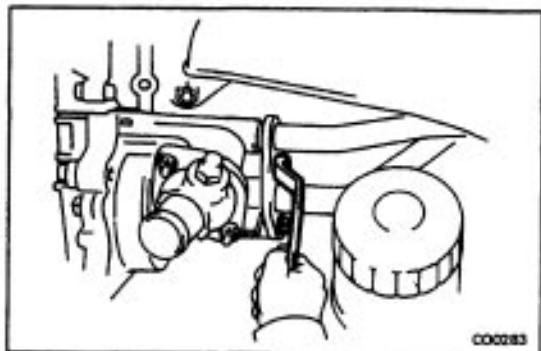


- (e) Install the two nuts holding the pump cover to the water by-pass pipe.

**Torque: 95 kg-cm (82 in.-lb, 9.3 N-m)**

3. **INSTALL PULLEYS AND TIMING BELT (See pages EM-29 to 33)**
4. **CONNECT RADIATOR LOWER HOSE**
5. **CONNECT WATER TEMPERATURE SWITCH CONNECTOR**
6. **FILL WITH ENGINE COOLANT (See page CO-5)**

## WATER PUMP(2VZ-FE) COMPONENTS

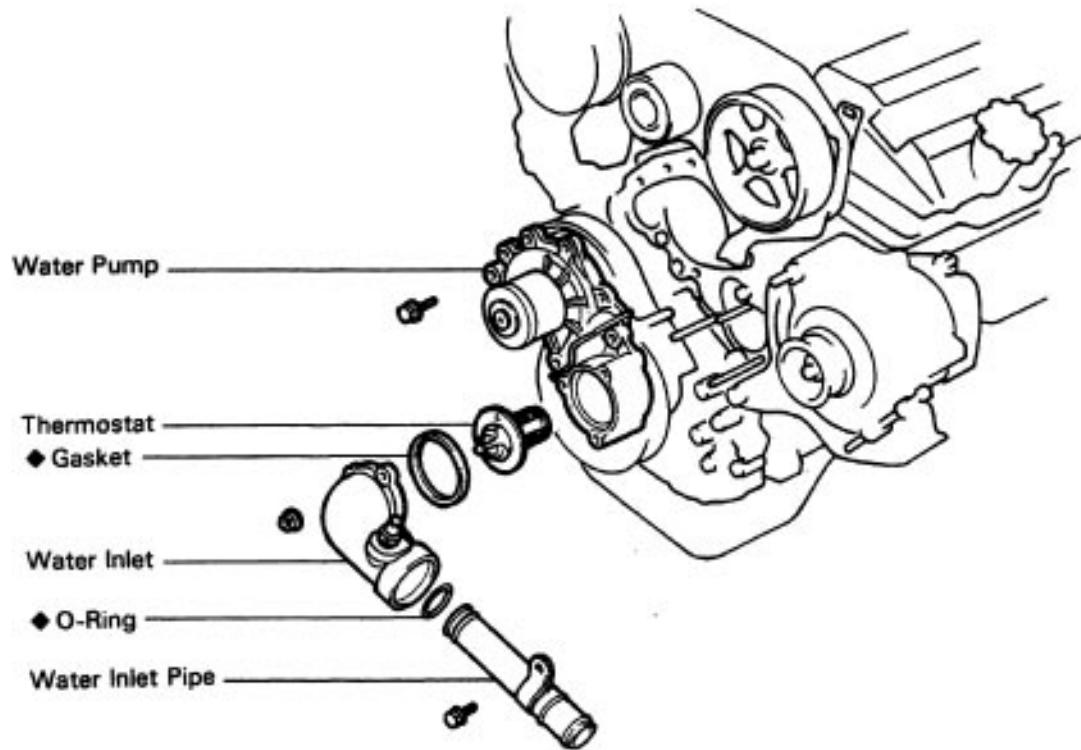

CO0871


### REMOVAL OF WATER PUMP


1. DRAIN ENGINE COOLANT (See page [CO-5](#))
2. DISCONNECT RADIATOR LOWER NOSE FROM WATER INLET PIPE
3. DISCONNECT TIMING BELT FROM WATER PUMP PULLEY (See pages [EM-34](#) to 39)

### 4. REMOVE WATER INLET PIPE

- (a) Remove the bolt holding the water inlet pipe to the alternator belt adjusting bar.
- (b) Remove the water inlet pipe and O-ring.


### 5. REMOVE WATER INLET AND THERMOSTAT (See steps 4 and 5 on page [CO-13](#))

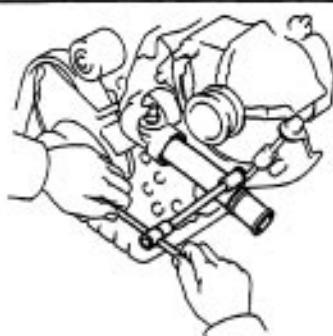

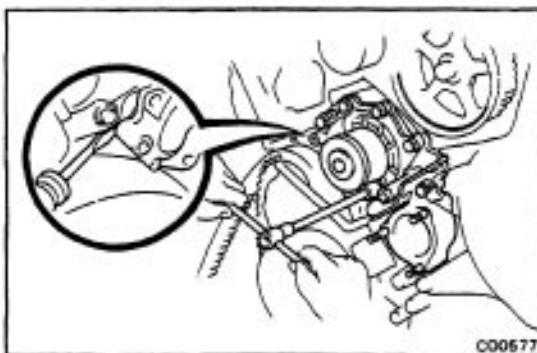

## 6. REMOVE WATER PUMP


- Remove the seven bolts.
- Remove the water pump by prying a screwdriver between the water pump and cylinder block.

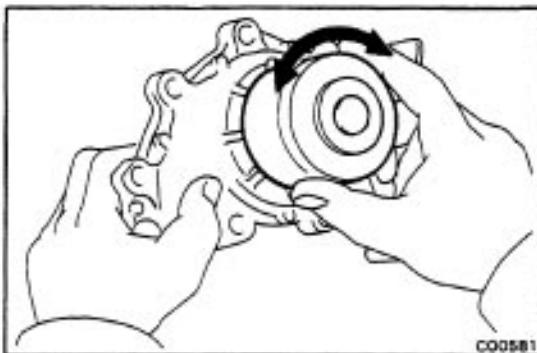

## INSPECTION OF WATER PUMP

### INSPECT WATER PUMP

Turn the pulley and check that the water pump bearing moves smoothly and quietly.

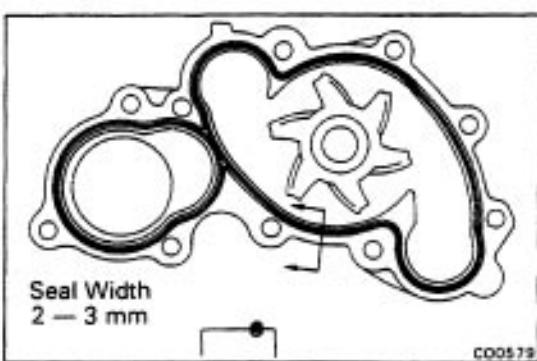

## INSTALLATION OF WATER PUMP

(See page [CO-9](#))

### 1. INSTALL WATER PUMP

- Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the water pump and cylinder block.
- Using a razor blade and gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing groove.
- Thoroughly clean all components to remove all the loose material.
- Using a non-residue solvent, clean both sealing surfaces.
- Apply seal packing to the water pump groove.

**Seal packing: Part No.08826-00100 or equivalent**

- Install a nozzle that has been cut to a 2 – 3 mm (0.08 – 0.12 in.) opening.


**HINT:** Avoid applying an excessive amount to the surface.


- Parts must be assembled within 5 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.
- Install the water pump with the seven bolts.

**Torque: 200 kg-cm (14 ft-lb, 20 N-m)**

### 2. INSTALL WATER INLET AND THERMOSTAT

(See steps 1 and 2 on page [CO-13](#))

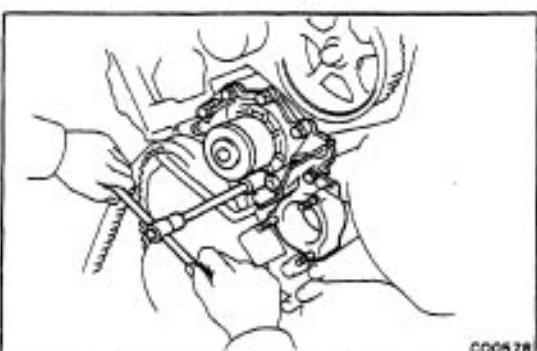

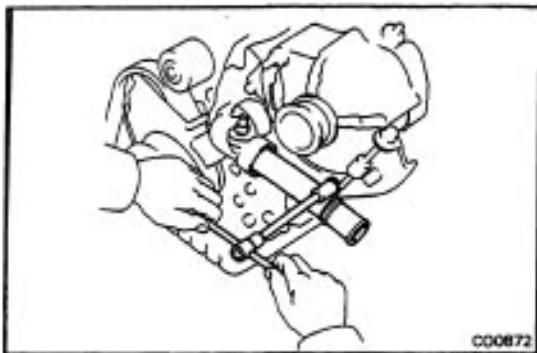

### 3. INSTALL WATER INLET PIPE


- (a) Install a new O-ring to the water inlet pipe.
- (b) Apply soapy water to the O-ring.
- (c) Connect the water inlet pipe to the water inlet.
- (d) Install the bolt holding the water inlet pipe to the alternator belt adjusting bar.

**Torque: 200 kg-cm (14 ft-lb, 20 N·m)**

**4. INSTALL TIMING BELT (See pages [EM-42](#) to [46](#))**

**5. CONNECT RADIATOR LOWER HOSE**

**6. FILL WITH ENGINE COOLANT (See page [CO-5](#))**

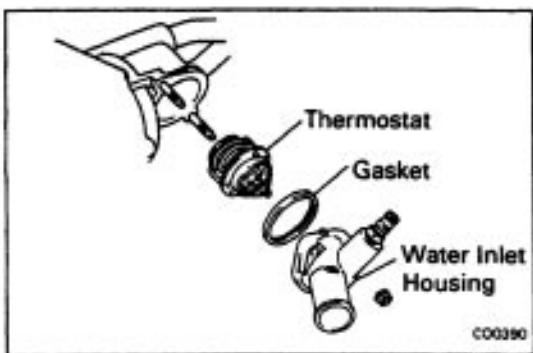

## THERMOSTAT (3S-FE) REMOVAL OF THERMOSTAT

1. DRAIN ENGINE COOLANT (See page CO-4)
2. DISCONNECT WATER TEMPERATURE SWITCH CONNECTOR
3. DISCONNECT RADIATOR FROM WATER INLET HOUSING
4. REMOVE WATER INLET HOUSING

Remove the two nuts and water inlet housing from the waterpump.

5. REMOVE THERMOSTAT AND GASKET

## INSPECTION OF THERMOSTAT

### INSPECT THERMOSTAT

HINT: The thermostat is numbered with the valve opening temperature.

- (a) Immerse the thermostat in water and gradually heat the water.
- (b) Check the valve opening temperature.

#### Valve opening temperature:

**80 – 84°C (176 – 183°F)**


If the valve opening temperature is not as specified, replace the thermostat.

- (c) Check the valve lift.

#### Valve lift:

**8 mm (0.31 in.) or more at 95°C (203°F)**

If the valve lift is less than specification, replace the thermostat.

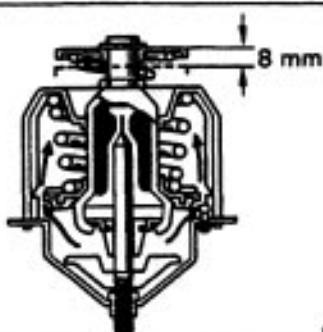

## INSTALLATION OF THERMOSTAT

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- (a) Install a new gasket to the thermostat.
- (b) Align the jiggle valve of the thermostat with protrusion of the water inlet housing and, insert the thermostat in the water inlet housing.

2. INSTALL WATER INLET HOUSING AND THERMOSTAT ASSEMBLY

Install the water inlet housing and thermostat assembly with the two nuts.


Torque: 90 kg-cm (78 in.-lb, 8.8 N·m)

3. CONNECT RADIATOR LOWER HOSE

4. CONNECT WATER TEMPERATURE SWITCH CONNECTOR

5. FILL WITH ENGINE COOLANT (See page CO-5)


6. START ENGINE AND CHECK FOR LEAKS

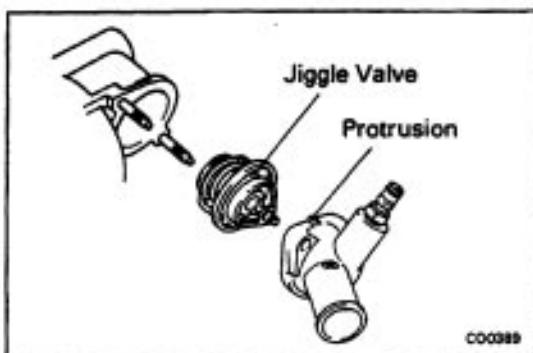

## THERMOSTAT (2VZ-FE)

### REMOVAL OF THERMOSTAT

1. DRAIN ENGINE COOLANT (See page [CO-5](#))
2. REMOVE WATER INLET PIPE  
(See steps 2 and 4 on page [CO-9](#))
3. DISCONNECT WATER TEMPERATURE SENSOR CONNECTOR
4. REMOVE WATER INLET  
Remove the three nuts and water inlet from the water pump.
5. REMOVE THERMOSTAT AND GASKET

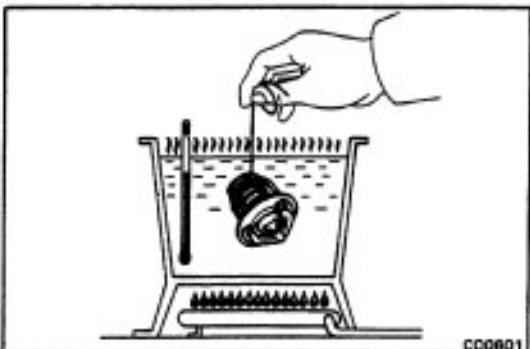

## INSPECTION OF THERMOSTAT

### INSPECT THERMOSTAT

HINT: The thermostat is numbered with the valve opening temperature.

(a) Immerse the thermostat in water and gradually heat the water.

(b) Check the valve opening temperature

#### Valve opening temperature:

**80 – 84°C (176 – 183°F)**

If the valve opening temperature is not as specified, replace the thermostat.


(c) Check the valve lift.


#### Valve lift:

**8.5 mm (0.335 in.) or more at 95°C (203°F)**

If the valve lift is less than specification, replace the thermostat.

(d) Check that the valve spring is tight when the thermostat is fully closed.

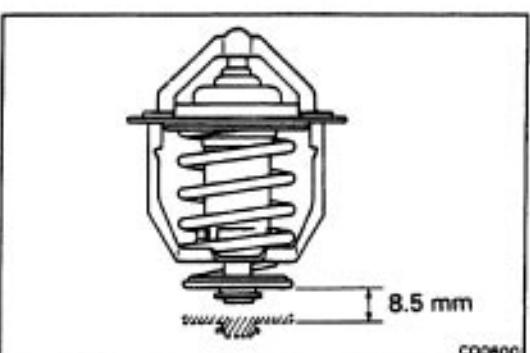


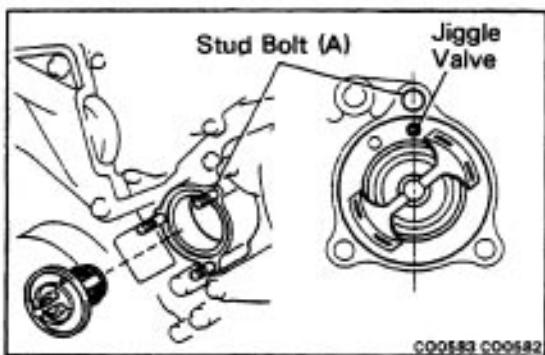

## INSTALLATION OF THERMOSTAT

### 1. PLACE THERMOSTAT IN WATER PUMP

- install a new gasket to the thermostat.
- Align the jiggle valve of the thermostat with stud bolt (A), and insert the thermostat in the water pump.

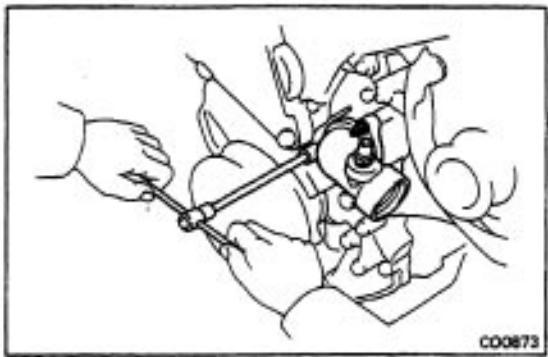

### 2. INSTALL WATER INLET

Install the water inlet with the three nuts.

**Torque: 200 kg-cm (14 ft-lb, 20 N·m)**

### 3. CONNECT WATER TEMPERATURE SENSOR CONNECTOR


### 4. INSTALL WATER INLET PIPE

(See steps 3 and 5 on page [CO-11](#))

### 5. FILL WITH ENGINE COOLANT (See page [CO-5](#))

### 6. START ENGINE AND CHECK FOR LEAKS

## RADIATOR COMPONENTS

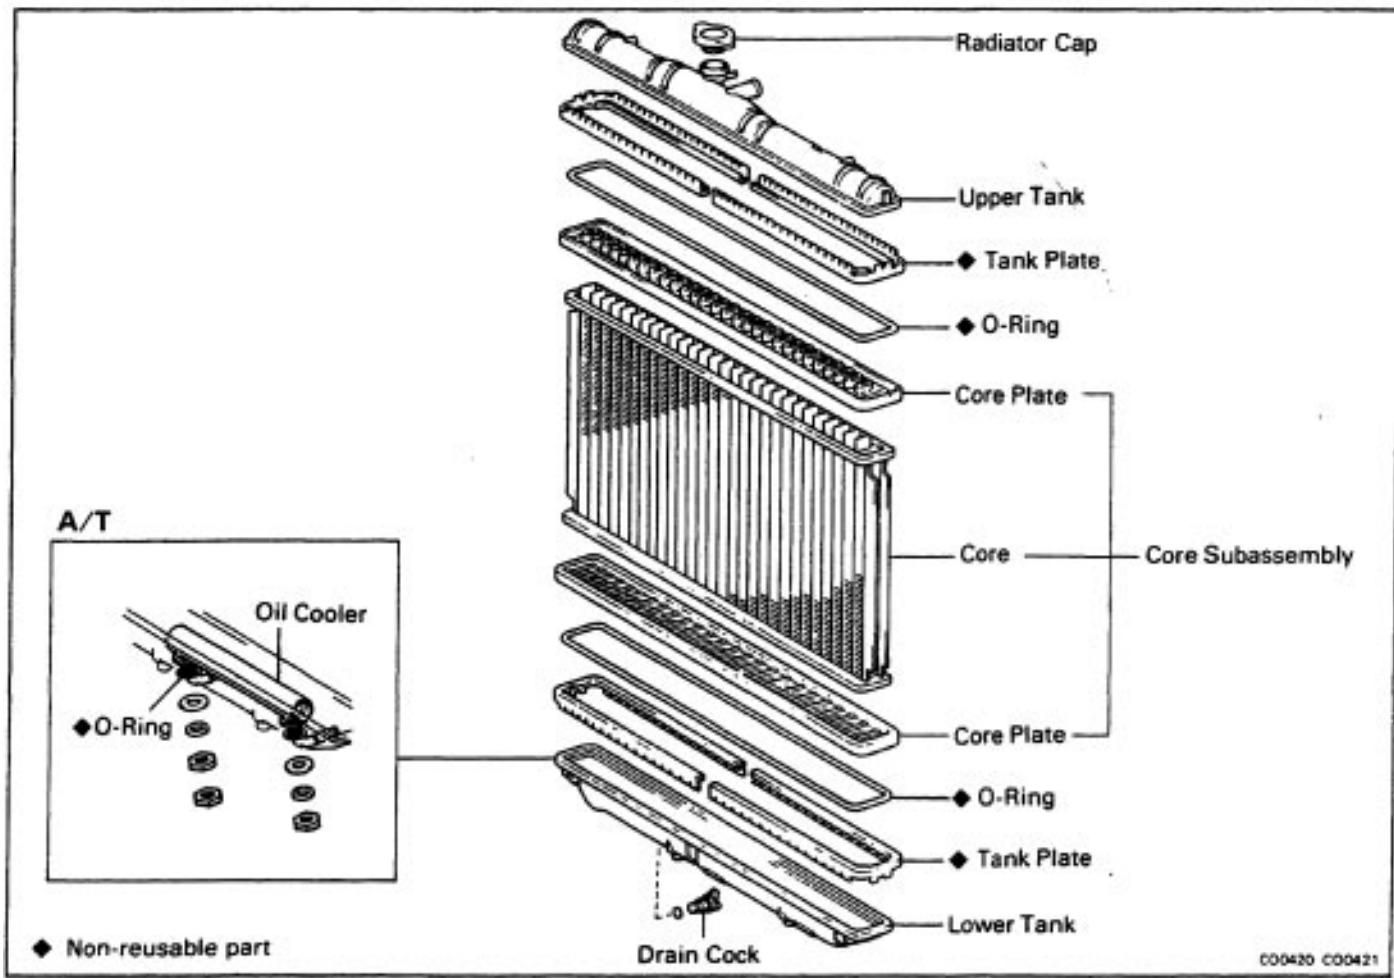

## CLEANING OF RADIATOR

Using water or a steam cleaner, remove any mud and dirt from the radiator core.

**NOTICE:** If using a high pressure type cleaner, be careful not to deform the fins of the radiator core. If the cleaner nozzle pressure is  $30 - 35 \text{ kg/cm}^2$  (427 - 498 psi, 2,942 - 3,432), keep a distance at least  $40 - 50 \text{ cm}$  (15.75 - 19.69 in.) between the radiator core and cleaner nozzle.

## INSPECTION OF RADIATOR

### 1. INSPECT RADIATOR CAP

Using a radiator cap tester, pump the tester and measure the relief valve opening pressure.


**Standard opening pressure:**


$0.75 - 1.05 \text{ kg/cm}^2$   
(10.7 - 14.9 psi, 74 - 103 kPa)

**Minimum opening pressure:**

$0.6 \text{ kg/cm}^2$  (8.5 psi, 59 kPa)

If the opening pressure is less than minimum, replace the radiator cap.

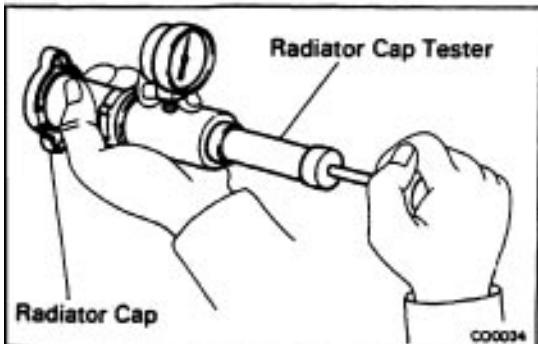

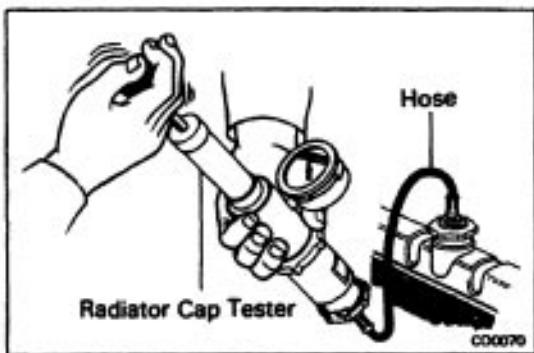

## 2. INSPECT COOLING SYSTEM FOR LEAKS

(a) Fill the radiator with coolant and attach a radiator cap tester.

(b) Warm up the engine.

(c) Pump it to 1.2 kg/cm<sup>2</sup> (17.1 psi, 118 kPa), check that pressure does not drop.

If the pressure drops, check for leaks as the hoses, radiator or water pump. If no external leaks are found, check the heater core, cylinder block and head.

## REMOVAL OF RADIATOR

### 1. DRAIN ENGINE COOLANT (See page CO-4 or 5)

### 2. REMOVE BATTERY

### 3. REMOVE IGNITION COIL (2VZ-FE), IGNITER AND BRACKET ASSEMBLY

### 4. DISCONNECT COOLANT RESERVOIR HOSE

### 5. DISCONNECT RADIATOR NOSE

### 6. DISCONNECT COOLING FAN MOTOR CONNECTOR(S)


### 7. (A/T)

#### DISCONNECT OIL COOLER HOSES

### 8. REMOVE RADIATOR AND ELECTRIC COOLING FAN(S)

Remove the two bolts, supports and radiator.

### 9. REMOVE ELECTRIC COOLING FANS FROM RADIATOR

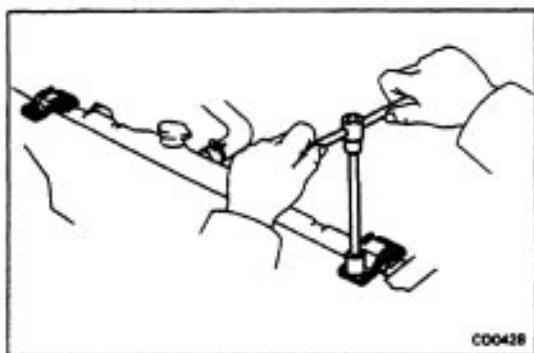

## DISASSEMBLY OF RADIATOR



(See page CO-15)


### 1. REMOVE TANK PLATE

(a) Raise the claws of the tank plates with SST in the numerical order shown in the figure.


SST 09230-00010

**NOTICE:** Be careful not to damage the core plate.

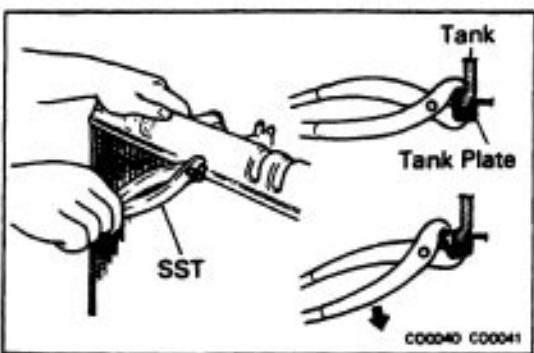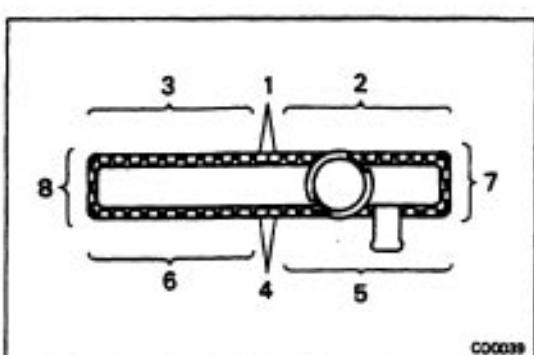

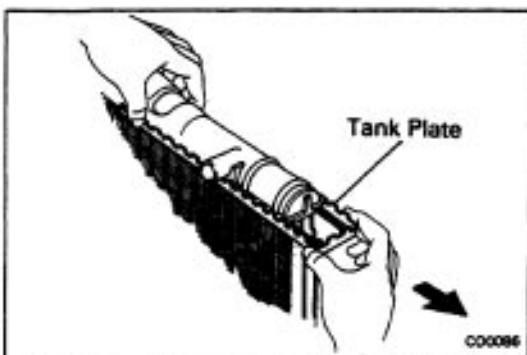


(b) Pull the tank plates outward.

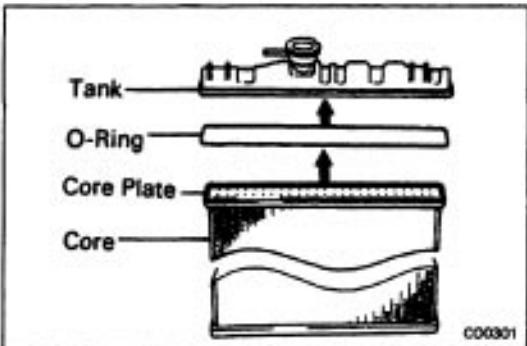

## 2. REMOVE TANK


- Pull the tank upward.
- Remove the O-ring.

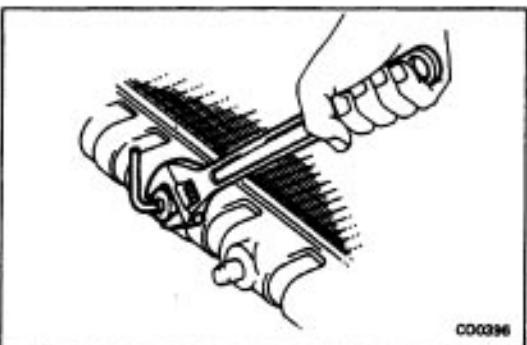

## 3. (A/T)

### REMOVE OIL COOLER FROM LOWER TANK

Remove the two nuts, spring washers, plate washers, oil cooler and two O-rings.

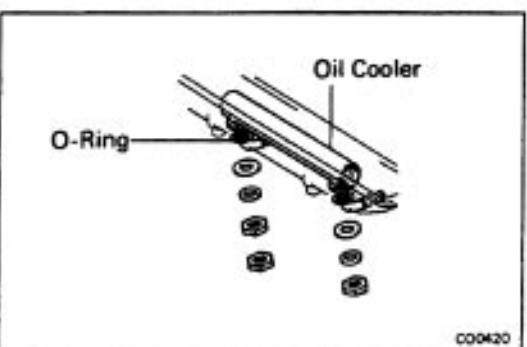


## ASSEMBLY OF RADIATOR

(See page [CO-15](#))

### 1. (A/T)

#### INSTALL OIL COOLER TO LOWER TANK


- Install new two O-rings to the oil cooler.
- Install the oil cooler with the two plate washers, spring washers and nuts.

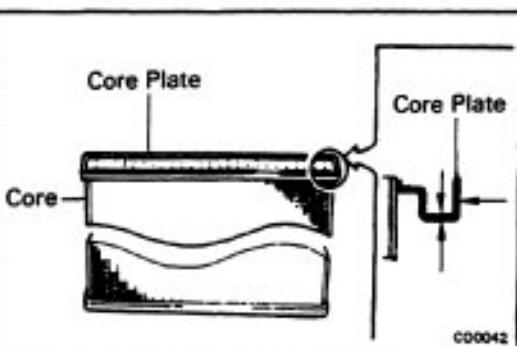

## 2. CHECK CORE PLATE FOR DAMAGE

### HINT:

- If the sides of the core plate groove are deformed, reassembly of the tank will be impossible. Therefore, first correct any deformation with pliers.
- Water leakage will result if the bottom of the core plate groove is damaged or dented. Therefore, repair or replace if necessary.

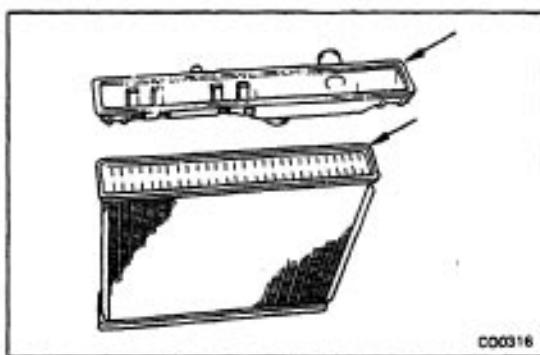


### 3. INSTALL TANK


Install a new O-ring and the tank.

HINT:

- Clean the tank and core plate.

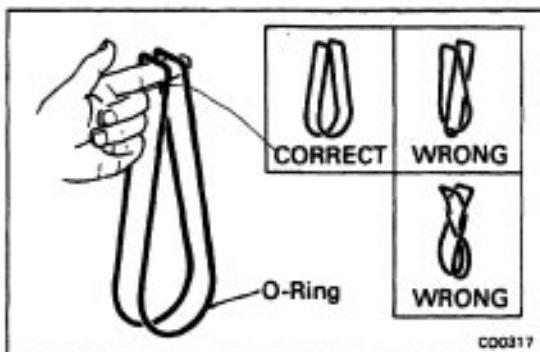


- Take out any twists.

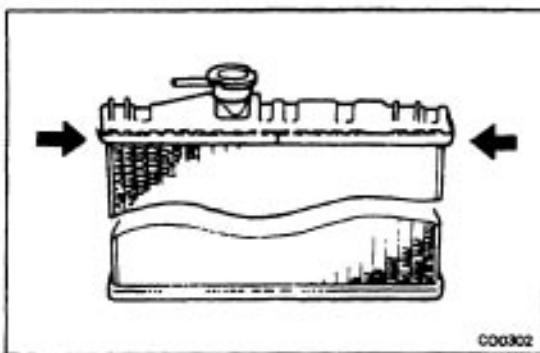

### 4. INSTALL TANK PLATE


Insert new tank plates from both ends in the direction of the arrows. Firmly set the tank plates in the core plate.

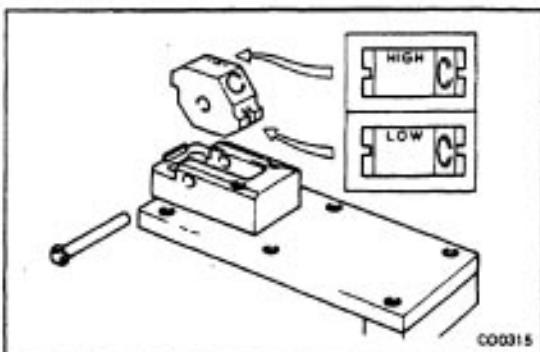

### 5. STAKE CLAWS OF TANK PLATES


- (a) Set the punch of SST to "LOW".

SST 09230-00010

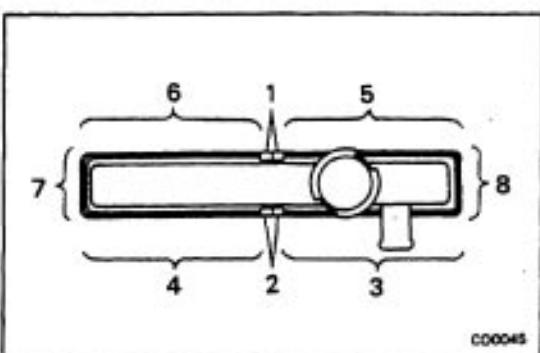


- (b) Stake the claws of the tank plates with SST in the numerical order shown in the figure.

SST 09230-00010

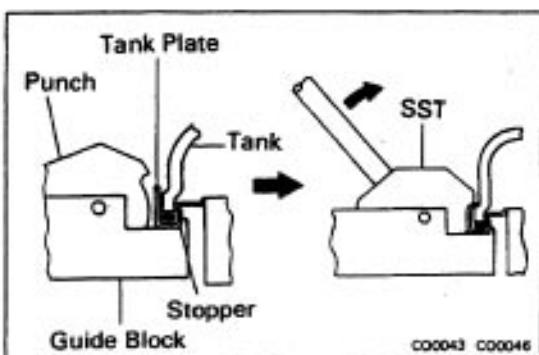


**NOTICE:** If the bottom of the core plate is staked with the SST on the guide block stopper, it may result in water leakage.

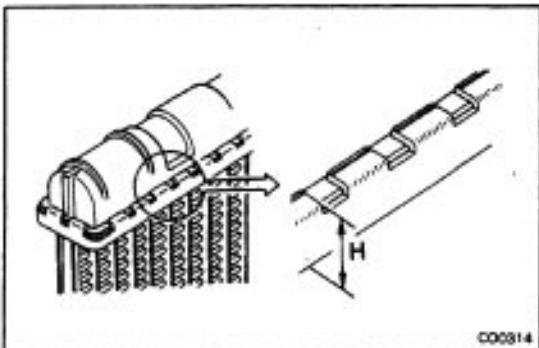


**HINT:**


- Stake with just enough pressure to leave a mark on the claw. The staked plate height (H) should be as follows:  
**Plate height (H):**  
**9.0–9.4 mm (0.354–0.370in.)**

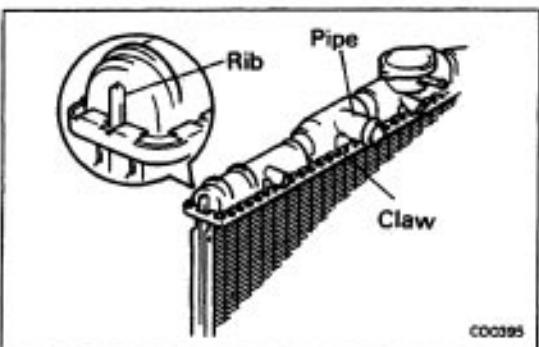

- Do not stake the areas protruding around the pipes, brackets or tank ribs.

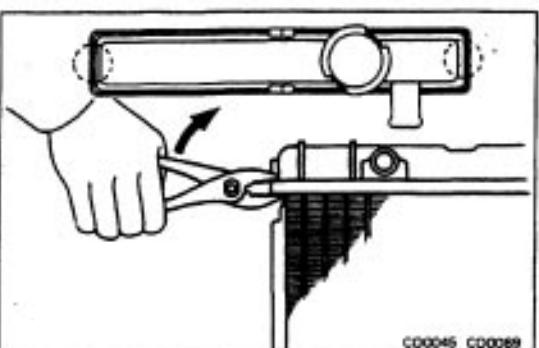


- The points shown in the illustration cannot be staked with the SST. Use pliers and be careful not to damage the core plates.

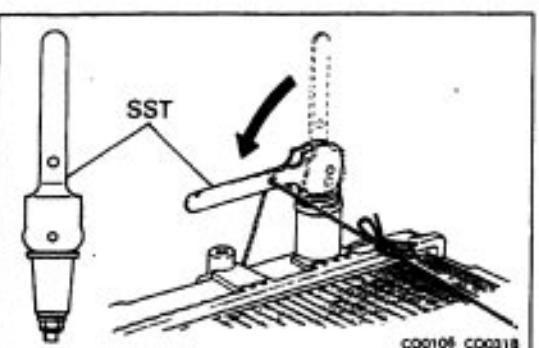

## 6. CHECK FOR WATER LEAKS

- (a) Tighten the drain plug.
- (b) Plug the inlet and outlet pipes of the radiator with SST.  
SST 09230=00010
- (c) Using a radiator cap tester, apply pressure to the radiator.  
**Test pressure: 1.8 kg/cm<sup>2</sup> (26 psi, 177 kPa)**

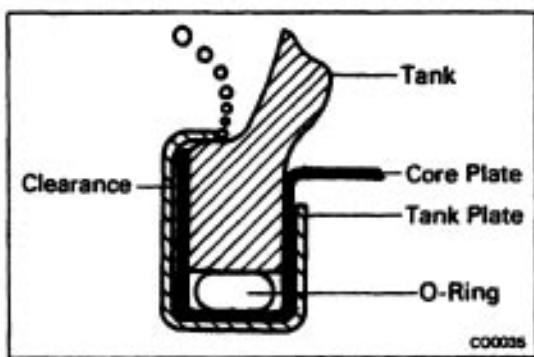


(d) Check for water leaks.

HINT: On radiators with resin tanks, there is a clearance between the core plate and tank plate where a minute amount of air will remain, giving the appearance of an air leak when the radiator is submerged in water. Therefore, before performing the water leak test, first switch the radiator around in the water until all air bubbles disappear.

## 7. PAINT TANK PLATE

HINT: If the water leak test checks out okay, allow the radiator to completely dry and then paint the tank plate.

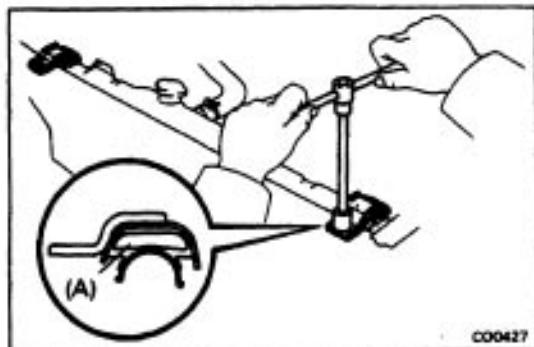

## INSTALLATION OF RADIATOR

1. INSTALL ELECTRIC COOLING FANS TO RADIATOR
2. INSTALL RADIATOR

Place the radiator in position, and install the two supports with the two bolts.

HINT: After installation, check that the rubber cushion (A) of the supports are not depressed.

### 3. (A/T)

#### CONNECT OIL COOLER HOSES

4. CONNECT COOLING FAN MOTOR CONNECTORS

5. CONNECT RADIATOR HOSES

6. CONNECT COOLANT RESERVOIR HOSE

7. INSTALL IGNITION COIL (2VZ-FE), IGNITER AND BRACKET ASSEMBLY

### 8. INSTALL BATTERY

Connect the ground strap.

9. FILL WITH ENGINE COOLANT (See page CO-5)


10. START ENGINE AND CHECK FOR LEAKS

### 11. (A/T)

#### CHECK AUTOMATIC TRANSMISSION (A/T) FLUID LEVEL

**NOTICE: Do not overfill.**

## ELECTRIC COOLING FAN (3S-FE) LOCATION OF ELECTRIC COOLING FAN COMPONENTS

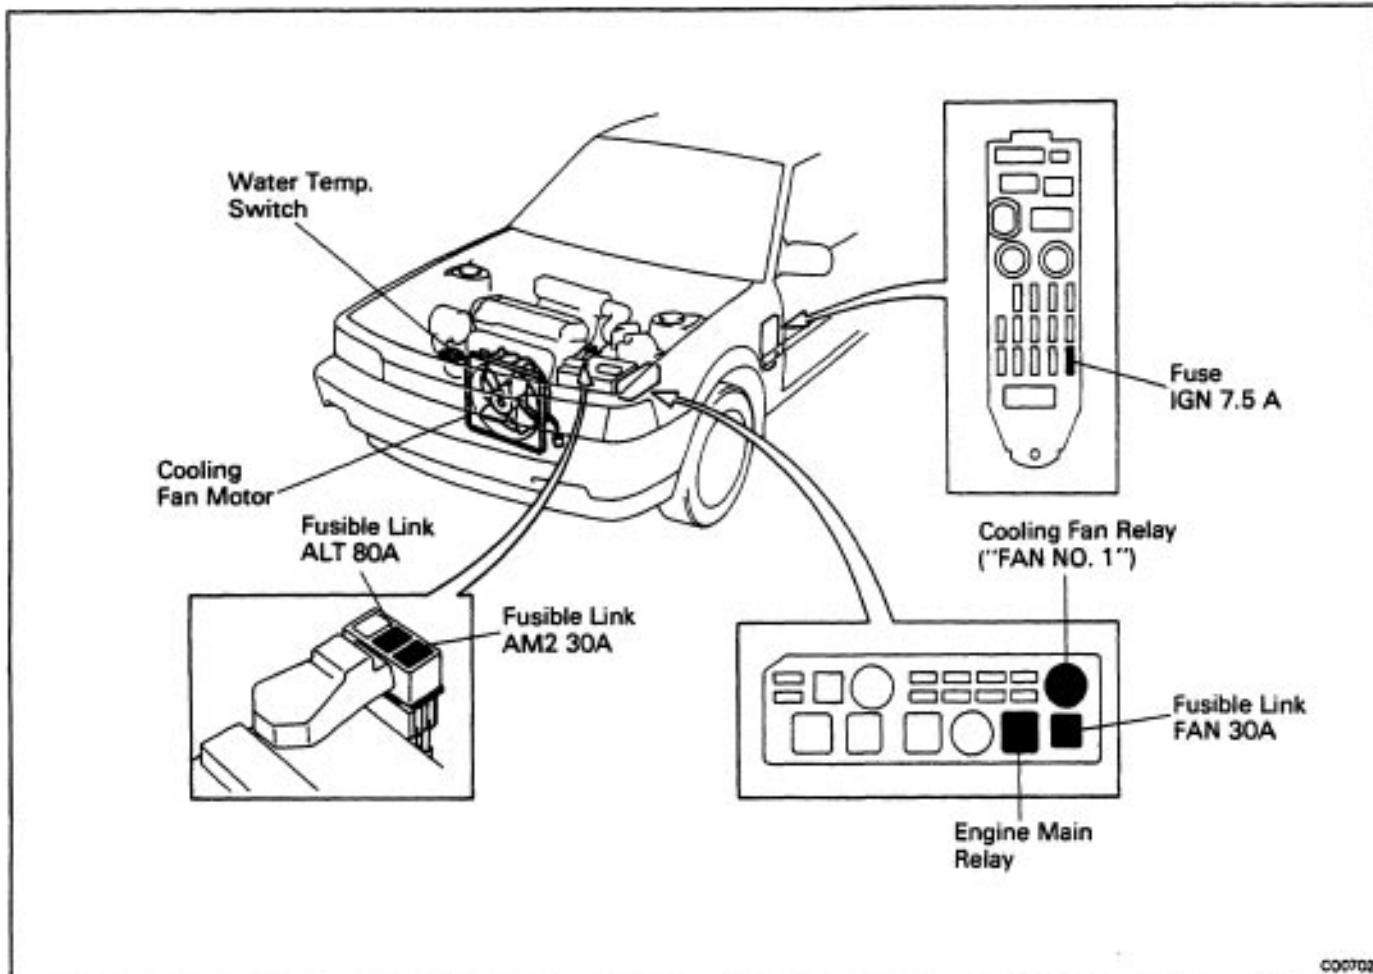

CO0702


### ON-VEHICLE INSPECTION

#### Low Temperature (Below 83°C (181°F))

##### 1. TURN IGNITION SWITCH "ON"

Check that the fan stops.

If not, check the cooling fan relay and water temperature switch, and check for a separated connector or severed wire between the cooling fan relay and water temperature switch.

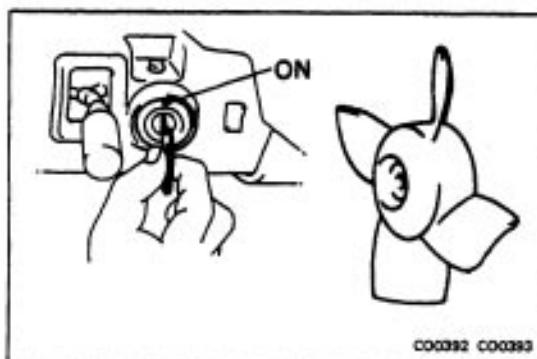







##### 2. DISCONNECT WATER TEMPERATURE SWITCH CONNECTOR

Check that fan rotates.

If not, check the cooling fan relay, fan motor, engine main relay and fuse, and check for a short circuit between the cooling fan relay and water temperature switch.

##### 3: CONNECT WATER TEMPERATURE SWITCH CONNECTOR

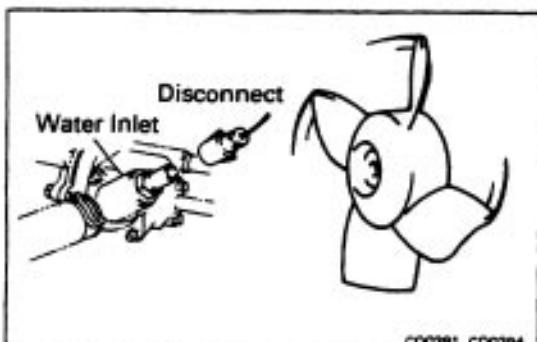

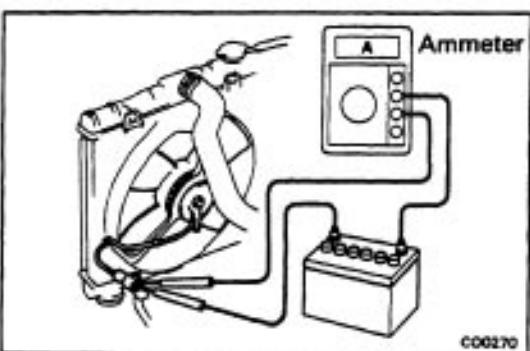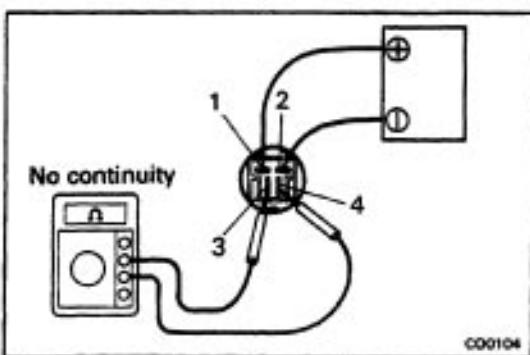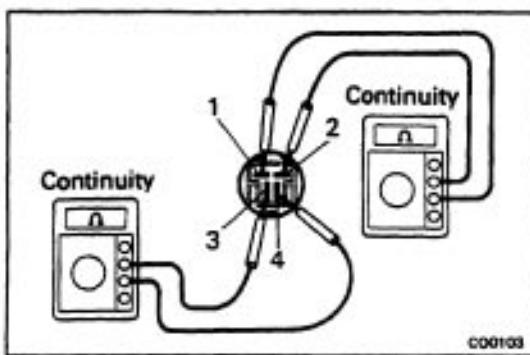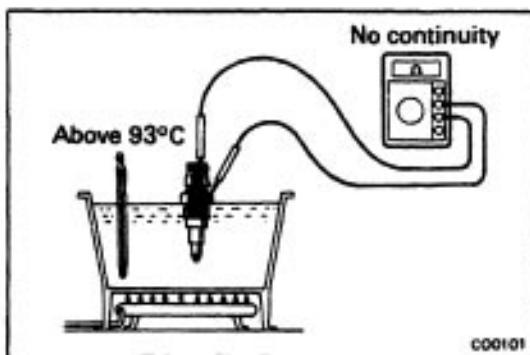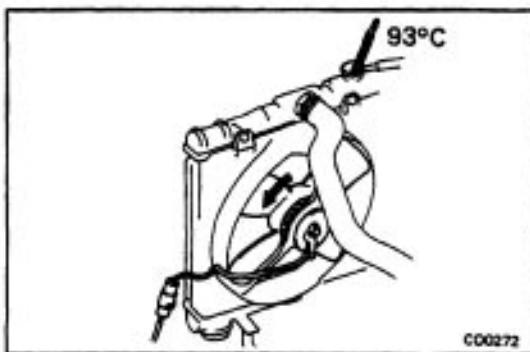

## High Temperature (Above 93°C (199°F))

### 4. START ENGINE

(a) Raise coolant temperature to above 93°C (199°F).

(b) Check that the fan rotates.

If not, replace the water temperature switch.

## INSPECTION OF ELECTRIC COOLING FAN COMPONENTS

### 1. INSPECT WATER TEMPERATURE SWITCH

**LOCATION:** On the water inlet housing.

(a) Using an ohmmeter, check that there is no continuity between the terminal and body when the coolant temperature is above 93°C (199°F).

(b) Check that there is continuity between the terminal and body when the coolant temperature is below 83°C (181°F).

If continuity is not as specified, replace the switch.

### 2. INSPECT COOLING FAN RELAY ("FAN NO.1")

#### A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

(b) Check that there is continuity between terminals 3 and 4.

If continuity is not as specified, replace the relay.

#### B. Inspect relay operation

(a) Apply battery voltage across terminal 1 and 2.

(b) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

### 3. INSPECT ENGINE MAIN RELAY (See page [CH-16](#))

### 4. INSPECT COOLING FAN MOTOR

(a) Connect battery and ammeter to the fan motor connector.

(b) Check that the fan motor rotates smoothly, and check the reading on the ammeter.


**Standard amperage:**

**3.2– 4.4A 2WD M/T**

**5.8 – 7.4 A 2WD A/T and 4WD M/T**


**8.8 10.8A 4WD A/T**

## ELECTRIC COOLING FANS (2VZ-FE) SYSTEM CIRCUIT

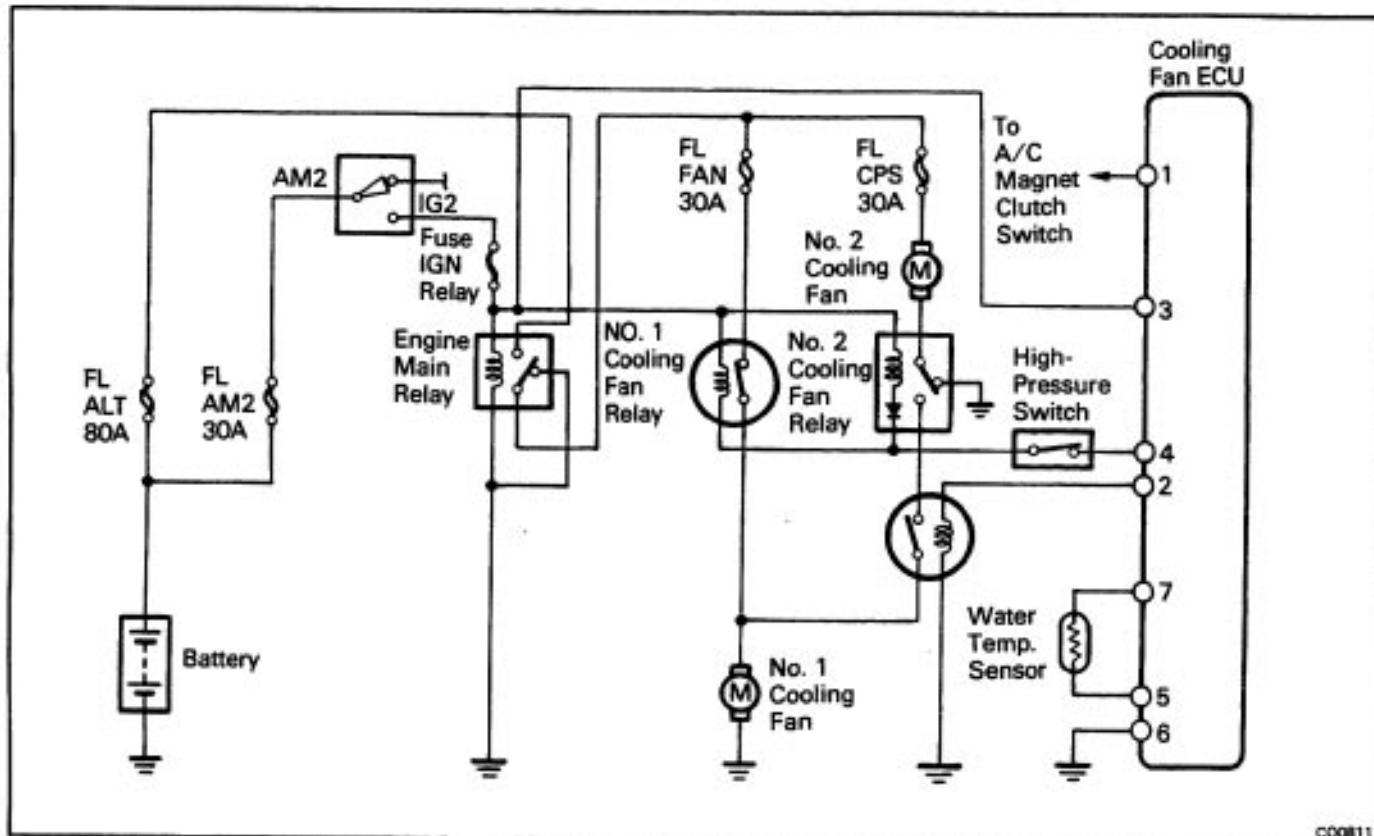


C00811

## LOCATION OF ELECTRIC COOLING FAN COMPONENTS

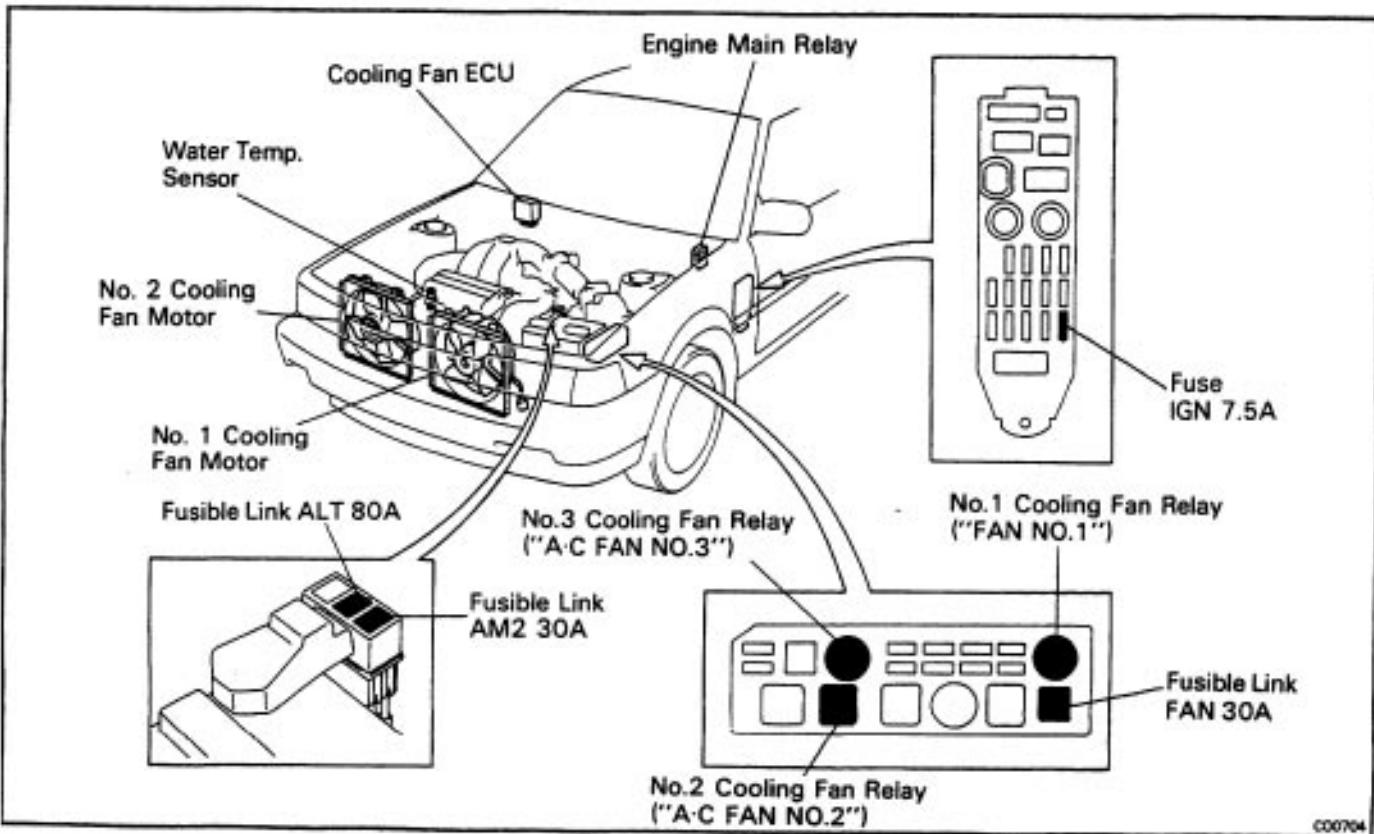

C00764

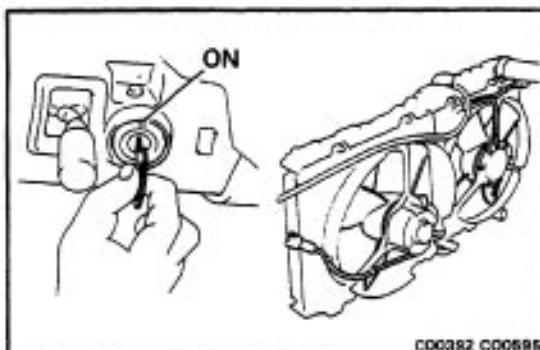


## ON-VEHICLE INSPECTION

### Low Temperature (Below 85°C (185°F))

#### 1. TURN IGNITION SWITCH "ON"

Check that the fans stop.

If not, check the cooling fan relays and water temperature sensor, and check for a separated connector or severed wire between the cooling fan relay and water temperature sensor.

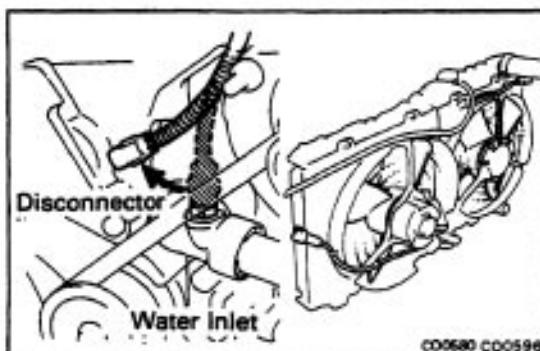


#### 2. DISCONNECT WATER TEMPERATURE SENSOR CONNECTOR

Check that the fans rotate.

If not, check the cooling fan relays, fan motor, engine main relay and fuse, and check for a short circuit between the cooling fan relay and water temperature sensor.

#### 3. CONNECT WATER TEMPERATURE SENSOR CONNECTOR

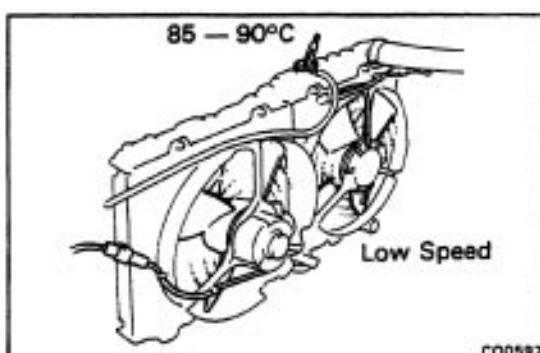


### High Temperature (85 – 90°C (185–194°F))

#### 4. START ENGINE

(a) Raise coolant temperature to 85 – 90°C (185 – 194°F).

(b) Check that the fans rotate. (at low speed)

If not, replace the water temperature sensor.

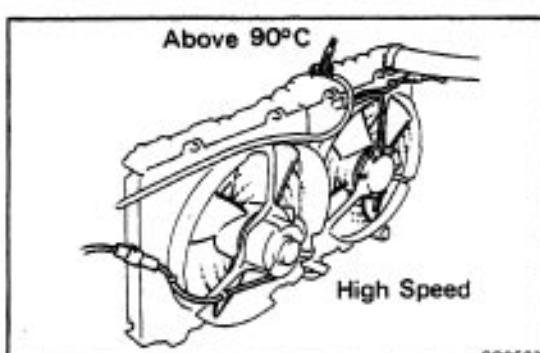


### High Temperature (Above 90°C (194°F))

#### 5. START ENGINE

(a) Raise coolant temperature to above 90°C (194°F).

(b) Check that the fans rotate. (at high speed)

If not, replace the water temperature sensor.

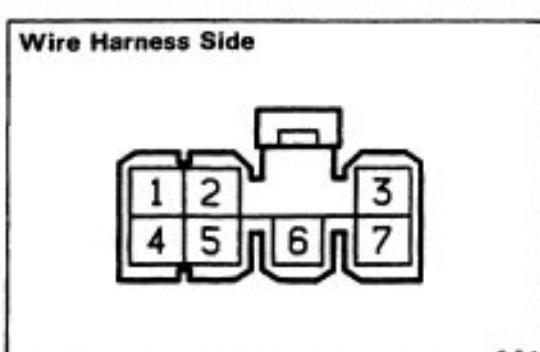


## INSPECTION OF ELECTRIC COOLANT FAN COMPONENTS

#### 1. INSPECT COOLING FAN ECC FOR CIRCUIT

Disconnect the cooling fan ECU, and check the connector on the wiring harness side as shown in the chart on the next page.

Check for	Tester connection	Condition	Specified value
Continuity	2 – Ground	–	Continuity
Voltage	3 – Ground	Ignition switch ON	Battery voltage
Voltage	4 – Ground	Ignition switch ON	Battery voltage
Resistance	5 – 7	Coolant temp.	80°C (176°F) Approx. 1.53 kΩ
			90°C (194°F) Approx. 1.18 kΩ
			95°C (203°F) Approx. 1.03 kΩ
Continuity	6 – Ground	–	Continuity

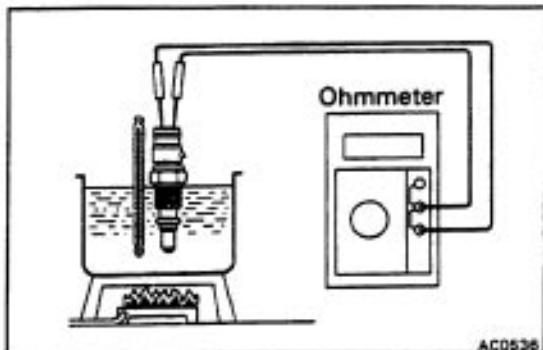

## 2. INSPECT WATER TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.


### Resistance:

- Approx. 1.53 kΩ at 80°C (176°F)
- Approx. 1.18 kΩ at 90°C (194°F)
- Approx. 1.03 kΩ at 95°C (203°F)

If resistance is not as specified, replace the sensor.

## 3. INSPECT ENGINE MAIN RELAY (See page CH-16)

## 4. INSPECT NO.1 COOLING FAN RELAY ("FAN NO.1") (See page CO-22)

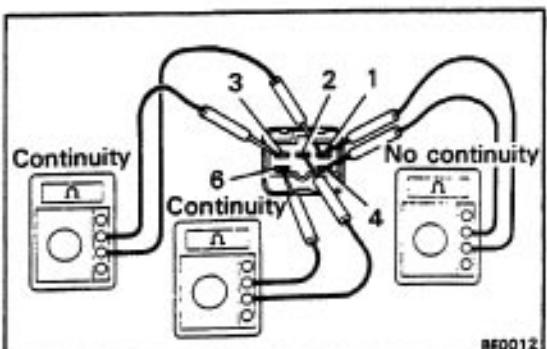


## 5. INSPECT NO-2 COOLING FAN RELAY ("AC FAN NO.2")

### A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 2 and 6.
- Check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 1 and 4.

If continuity is not as specified, replace the relay.

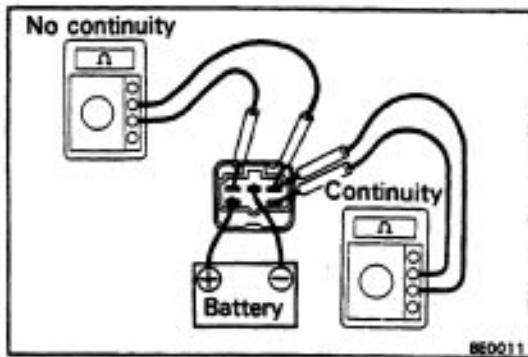
**B. Inspect relay operation**

- Apply battery voltage across terminal 2 and 6.
- Using an ohmmeter, check that there is no continuity between terminals 1 and 3.
- Check that there is continuity between terminals 1 and 4.  
If operation is not as specified, replace the relay.

**6. INSPECT No.3 COOLING FAN RELAY**

("AC FAN NO.3")

(See procedure **EFI Main Relay** on page [FI-122](#))

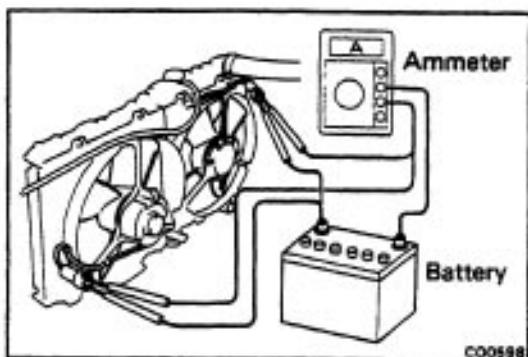**7. INSPECT COOLING FAN MOTORS**

- Connect battery and ammeter to the fan motor connector.
- Check that the fan motor rotates smoothly, and check the reading on the ammeter.

**Standard amperage: No. 1 12.1 –15.1A  
No.2 6.0–7.4A**